WF1804WP(C/N/Q/S/U/V/W/Y)
WF1802WP(C/N/Q/S/U/V/W/Y)
WF1804YP(C/N/Q/S/U/V/W/Y)
WF1802YP(C/N/Q/S/U/V/W/Y)
WF1704WP(C/N/Q/S/U/V/W/Y)
WF1702WP(C/N/Q/S/U/V/W/Y)
WF1704YP(C/N/Q/S/U/V/W/Y)
WF1702YP(C/N/Q/S/U/V/W/Y)

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at

www.samsung.com/register

SAMSUNG

WF1802WPU2-03042Q_EN.indd 1 2011-12-02 9:58:17

features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its super-size capacity to its energy efficiency, the Samsung washing machine has all the features to turn a mundane chore into a pleasure.

- **Eco Bubble Wash**

  Samsung's effective Eco Bubble delivers improved cleanliness with advanced fabric care. Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

- **Quick Wash**

  No time to waste! Our 15 minute Quick Wash will allow you to Wash and Run.
  Our Quick Wash programme can help with your busy life - now you can wash your favourite clothes (up to 2Kg) in just 15 minutes!

- **Outdoor Care**

  Using a Samsung washing machine with Eco Bubble allows you to wash waterproof clothing with greater comfort, in the knowledge that your washer provides excellent care for your outdoor clothes. The Foam Cushion created by Eco Bubble protects against impact and abrasion damage to the water proofing layer, minimizing damage to outdoor clothing, and also protecting other forms of delicate fabrics.

- **Baby Care**

  Your Samsung washing machine includes wash programs that add protection to the clothing of children with sensitive skin.
  These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children's clothes feel refreshingly clean whenever they are put on.

- **Wool Certified**

  The machine has been tested and passed the required Woolmark Company specification formachine washable wool products. This mark is the upgraded certification better than the existing Woolmark, which guarantees not only washing performance but also fabric care for wool products. Fabrics should be washed according to the instructions on the garment label as specified byWoolmark and Samsung.

- **Hand Wash**

  Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

WF1802WPU2-03042Q_EN.indd Sec1:2 2011-12-02 9:58:31

- **Eco Drum Clean**

  Using Eco Drum Clean helps to keep washing machine clean even without any chemical detergent or bleach. Keep your drum clean and odorless with specialized cleaning program.

- **Child Lock**

  The Child Lock function ensures that curious little hands are kept out of your washing machine.
  This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Delay End**

  Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Digital Graphic Display**

  The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

- **Wide door**

  Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

- **Aqua Hose & Leakage Sensor (Selected models)**

  The smartly designed water safety system for Samsung washing machines includes an intelligent hose for stopping water leaks at the source and leakage sensor at the bottom. If the hose breaks or if water leaks are detected, an internal sponge will expand to block water from the spigot.

- **Ceramic Heater for Durability & Energy Saving (selected models)**

  Our truly innovative Ceramic Heater is twice as durable as regular heaters.
  That saves you money on repairs. Plus, it eliminates the scale of hard water and save energy.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 36 tells you what to do if something goes wrong with your new washing machine.

WF1802WPU2-03042Q_EN.indd Sec1:3 2011-12-02 9:58:31

safety information

Congratulations on your new Samsung ActivFresh™ washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.
Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.
Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage.**
⚠ **CAUTION**	Hazards or unsafe practices that may result in **personal injury and/or property damage**.
⚠ **CAUTION**	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

WF1802WPU2-03042Q_EN.indd Sec2:4 2011-12-02 9:58:31

Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.

WARNING This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

WF1802WPU2-03042Q_EN.indd Sec2:5 2011-12-02 9:58:32

safety information

WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.
- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220 V~240 V / 50 Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.
- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Failure Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.
- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.
- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.
- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.
- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install this appliance near a heater, inflammable material.
Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature
- Frost may cause tubes to burst

Do not install this appliance in a location where gas may leak.
- This may result in electric shock or fire.

Do not use an electric transformer.
- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.
- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.

WF1802WPU2-03042Q_EN.indd Sec2:6 2011-12-02 9:58:33

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.

CAUTION CAUTION SIGNS FOR INSTALLATION

This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.

WARNING SEVERE WARNING SIGNS FOR USING

If the appliance is flooded, cut the water supply and power immediately and contact your nearest service centre.

- Do not tough the power plug with wet hands
- Failure to do so may cause electric shock

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

WF1802WPU2-03042Q_EN.indd Sec2:7 2011-12-02 9:58:33

safety information

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock

---

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse(such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

When the water supply hose comes loose from the faucet and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.

WF1802WPU2-03042Q_EN.indd Sec2:8 2011-12-02 9:58:33

CAUTION SIGNS FOR USING

When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.
- Failure to do so may result in discoloration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.
- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the faucet slowly.
Open the faucet slowly after a long period of non-use.
- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.
- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.
- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the faucet is turned off when the washer is not being used.
- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Take care that the rubber seal and the front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.)
- If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leakage.

Open the faucet and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.
- If the screws or the water supply hose connector are loose, it may result in water leakage.

To reduce the risk of fire or explosion:
- Under certain conditions, hydrogen gas may be produced in a hot water system such as your hot water heater that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time. Ventilate immediately without touching the power plug if there is a gas leak.

The appliance is designed for home use and used for domestic only.

The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

WF1802WPU2-03042Q_EN.indd Sec2:9 2011-12-02 9:58:34

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.
- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.
- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.
- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.
- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.
- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.
- This may result in burns.

Do not insert your hand into the detergent box after opening it.
- This may result in injury as your hand may be caught by the detergent input device.Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.
- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.
- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.
- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.
- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.
- This may result in problems with the washer.

WF1802WPU2-03042Q_EN.indd Sec2:10 2011-12-02 9:58:34

Do not use natural hand-washing soap for the washer.
- If it hardens and accumulates inside the washer, it may result in problems with the product, discoloration, rust or bad odors.

Do not wash large laundry items such as bedding in the washing net.
- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.
- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.
- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

WARNING SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.
- Failure to do so may result in electric shock or fire.

WF1802WPU2-03042Q_EN.indd Sec2:11 2011-12-02 9:58:34

contents

SETTING UP YOUR WASHING MACHINE 13

13 Checking the parts
14 Meeting installation requirements
14 Electrical supply and grounding
14 Water Supply
15 Drain
15 Flooring
15 Surrounding temperature
15 Alcove or closet installation
15 Installing your washing machine

WASHING A LOAD OF LAUNDRY 21

21 Washing for the first time
21 Basic instructions
22 Using the control panel
25 Child lock
25 Sound off
25 Delay end
26 Eco Bubble
27 Washing clothes using the cycle selector
28 Washing clothes manually
29 Detergent and additives information
29 Which detergent to use
30 Detergent drawer
30 Liquid Detergent (Selected models)

CLEANING AND MAINTAINING YOUR WASHING MACHINE 31

31 Eco drum clean
32 Draining the washing machine in an emergency
33 Cleaning the detergent drawer and drawer recess
34 Cleaning the debris filter
34 Cleaning the exterior
35 Cleaning the water hose mesh filter
35 Repairing a frozen washing machine
35 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 36

36 Check these points if your washing machine...
37 Information codes

CALIBRATING YOUR WASHING MACHINE 38

38 Calibration mode

CYCLE CHART 39

39 Cycle chart

APPENDIX 40

40 Fabric care chart
40 Protecting the environment
40 Declaration of conformity
41 Specifications

WF1802WPU2-03042Q_EN.indd Sec3:12 2011-12-02 9:58:34

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

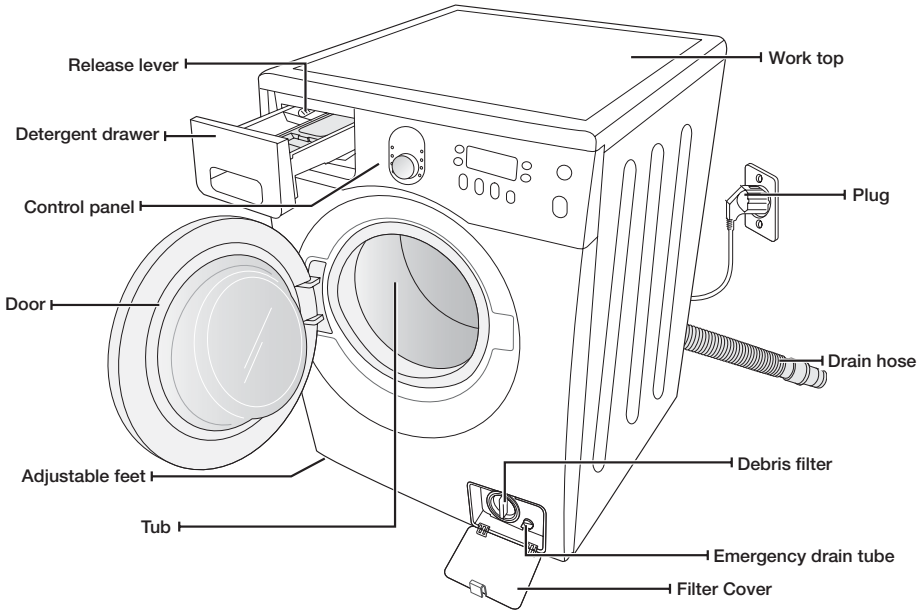

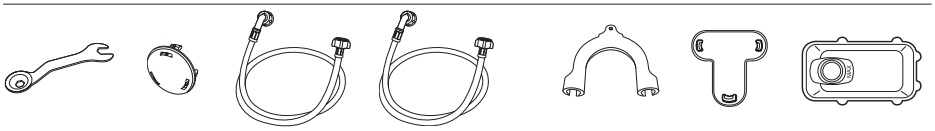

Spanner	* Bolt hole covers	Cold	Hot (Selected model)	Hose guide	Cap Fixer (Selected model)	Liquid detergent box (Selected model)
		Water supply hose				

*** Bolt hole covers :** The number of bolt hole covers depends on the model (3~5 covers).

WF1802WPU2-03042Q_EN.indd Sec4:13 2011-12-02 9:58:34

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.

WARNING Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- AC 220-240 V / 50 Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock.
Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 4 feet (122cm) of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 10 feet (305cm) long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WF1802WPU2-03042Q_EN.indd Sec4:14 2011-12-02 9:58:35

Drain

Samsung recommends a standpipe height of 65 cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm	Rear – 51 mm
Top – 25 mm	Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1
Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 32 ˚F or 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WF1802WPU2-03042Q_EN.indd Sec4:15 2011-12-02 9:58:36

STEP 2
Removing the shipping bolts

Before installing the washing machine, you must remove the five shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

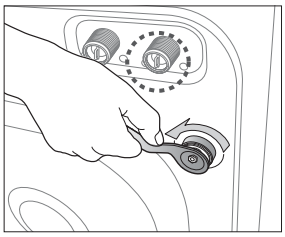

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

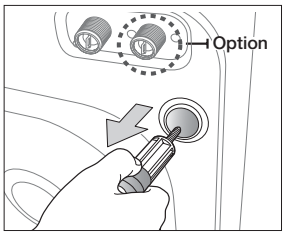

3. Fill the holes with the supplied plastic covers.

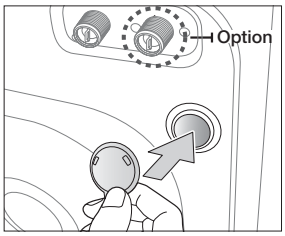

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

Insert the cap fixer, (one of the accessories in the vinyl pack), into the hole from which you removed the power cord at the back of the product (Selected model).

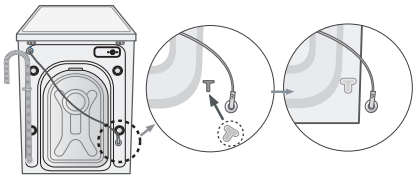

WF1802WPU2-03042Q_EN.indd Sec4:16 2011-12-02 9:58:37

STEP 3
Adjusting the levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the leveling feet in and out as necessary by hand.

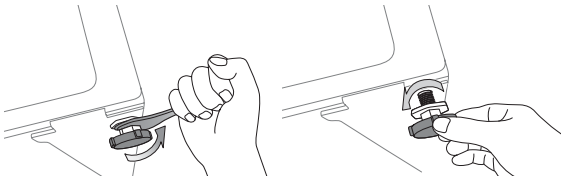

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

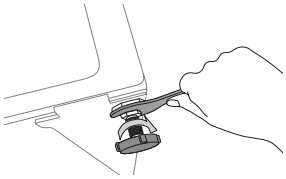

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

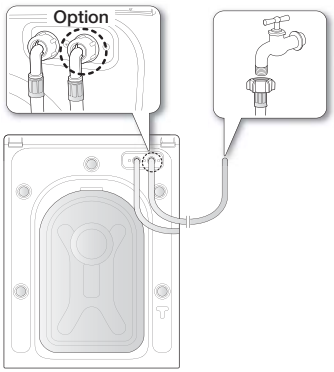

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WF1802WPU2-03042Q_EN.indd Sec4:17 2011-12-02 9:58:37

setting up your washing machine

Connecting the water supply hose (selected models)

1. Remove the adaptor from the water supply hose.

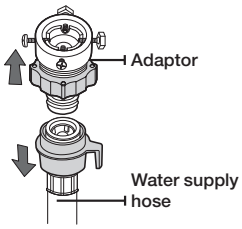

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.



3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

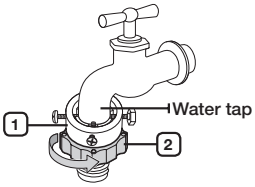

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

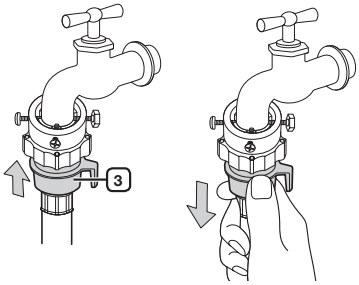

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

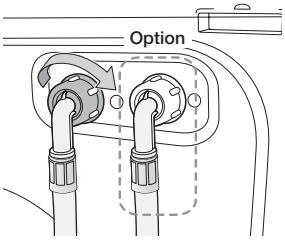

WF1802WPU2-03042Q_EN.indd Sec4:18 2011-12-02 9:58:38

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

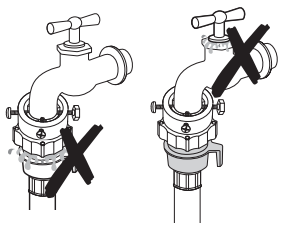

WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

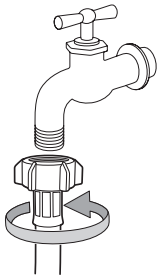

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Connecting the Aqua Hose (Selected models)

The Aqua Hose was invented for perfect leakage protection.It is attached to the water supply hose and automatically cuts off the water flow if the hose is damaged. It also displays a warning indicator.

- Connect the water supply hose to the tap as shown.

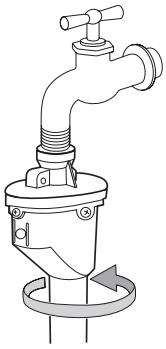

WF1802WPU2-03042Q_EN.indd Sec4:19 2011-12-02 9:58:39

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. **Over the edge of a wash basin:** The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

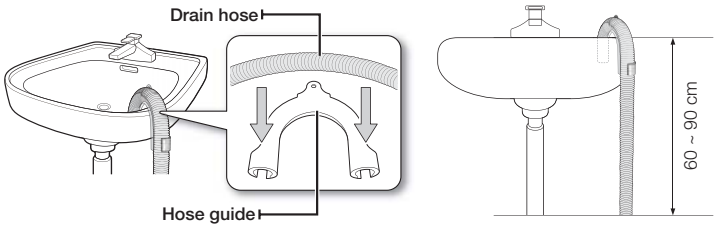

2. **In a sink drain pipe branch:** The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. **In a drain pipe:** We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

The standpipe drain requires;

- minimum diameter 5 cm.
- minimum carry-away capacity 60 liter per minute.

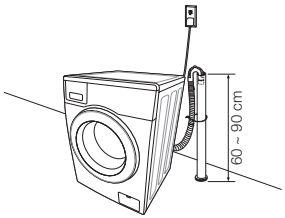

STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, an AC 220-240 V / 50 Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 14.)

WF1802WPU2-03042Q_EN.indd Sec4:20 2011-12-02 9:58:39

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

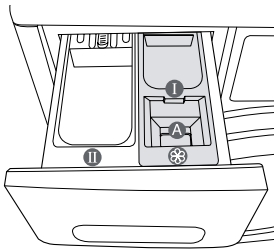

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.
Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 29.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not wash water-proofed items.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WF1802WPU2-03042Q_EN.indd Sec5:21 2011-12-02 9:58:40

washing a load of laundry

USING THE CONTROL PANEL

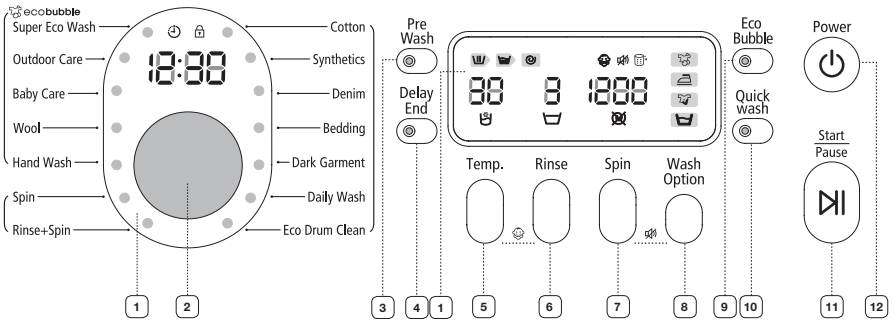

1 DIGITAL GRAPHIC DISPLAY	Displays the remaining wash cycle time, all cycle information, and error messages.
2 CYCLE SELECTOR	Select the tumble pattern and spin speed for the cycle. For detailed information, refer to "Washing clothes using the cycle selector" (see page 27). **Cotton** - For averagely or lightly soiled cotton, bed linen, table linen, underwear, towels, shirts, etc. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. **Denim** - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing. **Bedding** - For bed spread, bed sheet, duvet cover etc. Wash under 2 kg and only 1 kind of bedding to achieve the best result. **Dark Garment** - Additional rinses and reduced spinning ensure that your favourite dark clothes are washed gently and rinsed thoroughly. **Daily Wash** - Use for everyday items such as underwear and shirts. **Eco Drum Clean** - Use for drum cleaning. It cleanses dirt and bacteria of drum. Regular use (after every 40 washes) is recommended. No detergent or bleach needed. **Super Eco Wash** - Low temperature Eco Bubble ensures that you achieve perfect wash results while allowing effective energy saving. **Outdoor Care** - Use for outdoor wear such as mountain clothes, skiwear, and sports wear. Fabrics include functional technology finishes and fibers such as spandex, stretch, and micro-fiber. **Baby Care** - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes. **Wool** - Only for machine-washable wool. A load should be less than 2.0 kg. • The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem. • Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers.

WF1802WPU2-03042Q_EN.indd Sec5:22 2011-12-02 9:58:42

	The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M0814 for WF18***** series, M0815 for WF17***** series. (Certificate Number issued by IWS NOM INEE Co., Ltd.) **Hand Wash** - A very light wash cycle as gentle as a hand wash. **Spin** - Performs an additional spin cycle to remove more water. **Rinse + Spin** - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load.
3 **PREWASH SELECTION BUTTON**	Press this button to select pre-wash. Pre-wash is only available with:Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Baby Care.
4 **DELAY END SELECTION BUTTON**	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments).The hour displayed indicates the time when the wash cycle will be finished.
5 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (Cold Water, 30 ˚C, 40 ˚C, 60 ˚C and 95 ˚C).
6 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
7 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. WF1804/WF1704: Rinse Hold, No spin, 400, 800, 1200, 1400 rpm WF1802/WF1702: Rinse Hold, No spin, 400, 800, 1000, 1200 rpm "No spin" - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold" -The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
8 **WASH OPTION SELECTION BUTTON**	Press this button repeatedly to cycle through the wash options: Soak → Intensive → Easy Iron → Soak + Intensive → Soak + Easy Iron → Intensive + Easy Iron → Soak + Intensive + Easy Iron → off "Intensive": Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle."Soak": Use this option to effectively remove stains from your laundry by soaking your laundry. • The Soak function is performed 13 minutes into the wash cycle. • The Soak function continues for 30 minutes with six cycles, where one cycle is a soak cycle that spins for 1 minute and stands still for 4 minutes. • The Soak function is only available for the following wash programs: Cotton, Synthetics, Denim, Bedding, Baby care, Daily wash. "Easy Iron": Use this option to prepare your laundry so that it can be easily ironed.

WF1802WPU2-03042Q_EN.indd Sec5:23 2011-12-02 9:58:43

9 **ECO BUBBLE SELECTION BUTTON**	Eco Bubble selection is turned on as a default. Press the Eco Bubble option button once to deselect and the Bubble Generator OFF (shown on the panel), press it again to turn the function back ON. • Some wash cycles must have Eco Bubble option ON (will show on the panel, and the Generator will turn on automatically). • Other wash cycles do not need this option and automatically turn the Generator OFF. • On many cycles, you can manually adjust this option, which will visibly affect wash time on the panel to achieve results (please see page 26 for more information).
10 **QUICK WASH SELECTION BUTTON**	For lightly soiled garments and less than 2 kg laundry that you require quickly. It takes about minimum 15 minute, but can vary from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilized detergent unbalaced load, fluctuation in the electricity supply and extra options selected. • Press this button repeatedly to choose cycle time: 15min → 20min → 30min → 40min → 50min → 60min → 70min → 80min → 90min → Off ⚠ WARNING Powdered/Liquid detergent should be under 20 g(for 2 kg load) or detergent may remain on the clothes.
11 **START/PAUSE SELECTION BUTTON**	Press to pause and restart a cycle.
12 **POWER BUTTON**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WF1802WPU2-03042Q_EN.indd Sec5:24 2011-12-02 9:58:45

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

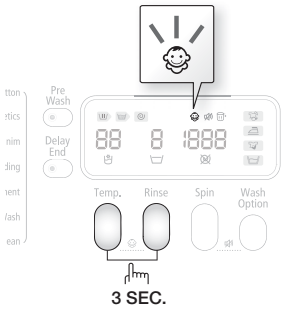

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Option** button at the same time for 3 seconds. The "Sound Off"will be lit when this feature is activated.

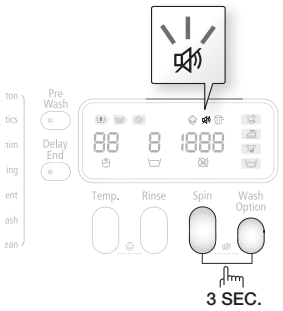

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay End" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

WF1802WPU2-03042Q_EN.indd Sec5:25 2011-12-02 9:58:45

Eco Bubble

Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

The bubble function is available in all courses except for Eco Drum Clean course and the function availability is as follows.

Course	Bubble function	Canceling the bubble function
Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash	Available	Available
Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash		Not available
Eco Drum Clean	Not available	-

- A different bubble function may be applied depending the course.

Eco Bubble selection is default. Press it once to deselect bubble option, press it again to select bubble option.

1. Open the door, place the laundry inside the wash tub and close the door.
2. Press the **Power** button.
3. Select a function.
4. Place the appropriate amount of detergent and fabric softener into the corresponding compartments depending on the amount of laundry and close the detergent drawer.
   - Add the appropriate amount of detergent into the detergent compartment Ⅱ, and add the fabric softener to softener compartment ❀ just under the fiber softener base line (MAX) of "A")
   - When the Prewash course is selected, add detergent into the prewash compartment Ⅰ as well.
   - To use liquid detergent, leave the liquid detergent box in the drawer(refer to "Liquid Detergent" section on page 30).

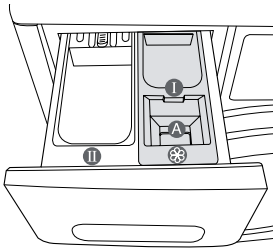

Do not add powdered detergent into the liquid detergent box.

5. Press the Start/Pause button.
   - Press the **Start/Pause** button to start the wash.
   - The amount of the laundry is automatically detected and the laundry is washed.
   - Once a washing machine operation begins, you cannot add or select the bubble function.

- Enough bubbles are generated with the specified amount of detergent.
- Please clean the Debris filter frequently. Periodic cleaning helps generate sufficient bubbles.
- Depending on the detergent and the laundry, the bubbles may be absorbed and seem like a small quantity.
- Although bubbles are generated once the wash begins, it may take several minutes for users to see them.

WF1802WPU2-03042Q_EN.indd Sec5:26 2011-12-02 9:58:49

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash and Baby Care cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Eco Drum Clean, Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the display will show "End" for 5 minutes, and then the powerturns off automatically.

1. Open the door.
2. Remove laundry.

WF1802WPU2-03042Q_EN.indd Sec5:27 2011-12-02 9:58:50

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature. (Cold water, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.
   The rinse hold function allows you to remove items that are still wet from the washing machine. (⊗ : No Spin, ⎵: Rinse Hold)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cotton, mixed fibres, synthetics, silks, wool and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.
Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.
Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

WF1802WPU2-03042Q_EN.indd Sec5:28 2011-12-02 9:58:50

Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity	
Model	WF1804 / WF1802	WF1704 / WF1702
Cotton - average/lightly soiled - heavily soiled	8.0 kg	7.0 kg
Synthetics	3.0 kg	3.0 kg
Denim	3.0 kg	3.0 kg
Bedding	2.0 kg	2.0 kg
Outdoor Care	2.0 kg	2.0 kg
Wool	2.0 kg	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvets, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Duvets, the recommended load capacity is 2.0(kg) or less.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

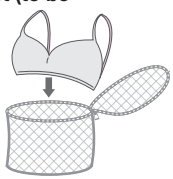

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetics, items, Hand Wash For Wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Please note the following when using the Wool course.

- Use a neutral liquid detergent for wool only.
- When using a powder detergent, it may remain on the laundry and cause damage to the material (wool).

WF1802WPU2-03042Q_EN.indd Sec5:29 2011-12-02 9:58:51

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do NOT open the detergent drawer when your washing machine is running.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.
3. Add the recommended amount of fabric softener into the softener compartment ❀ if required.

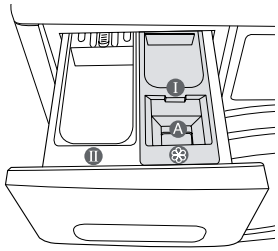

CAUTION Do NOT add any powder/liquid **detergent** to the softener compartment (❀).

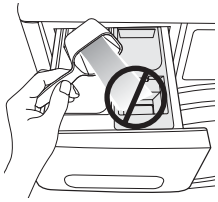

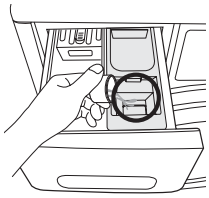

4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⅰ.

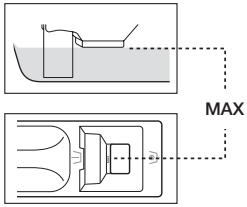

When washing large items do NOT use the following detergent types.

- Tablet and capsule type detergents
- Detergents using a ball and net

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked.)

Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

Liquid Detergent (Selected models)

To use liquid detergent, place the liquid detergent box into the main wash section of the detergent drawer and pour liquid detergent into the liquid detergent box.

- DO NOT fill above the MAX line.
- When using powdered detergent, remove the liquid detergent box from the detergent drawer. Powdered detergent will not dispense with liquid detergent box.
- After a wash, some liquid may remain in the detergent drawer.

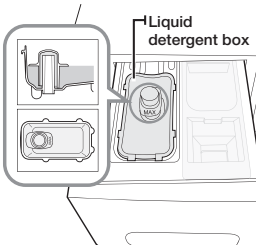

WF1802WPU2-03042Q_EN.indd Sec5:30 2011-12-02 9:58:52

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

ECO DRUM CLEAN

This course is a self-cleaning course that removes mold that may occur inside the washing machine.

1. Press the **Power** button.
2. Turn the Cycle Selector to the ECO Drum Clean course.
   - You can only use the Delay End function.
   - The water temperature during the ECO Drum Clean is set to 70 ℃.

   You cannot change the temperature.
   - It will auto set cotton 30 ℃ middle water level program when cloth is put in.

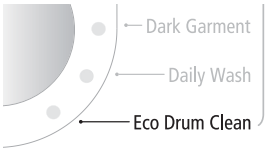

3. Place the appropriate amount of cleansing agent into the detergent compartment Ⅱ and close the detergent drawer (when cleaning the drum using a cleansing agent).
   - Be sure to use the recommended cleansing agent for cleaning the drum.
   - There are powder-type and liquid-type drum cleansing agents. The liquid-type cleaning agent is only available with liquid detergent box (option).

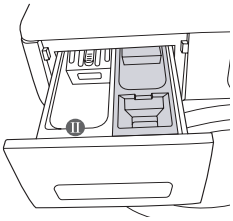

4. Press the **Start/Pause** button.
   - If you press the **Start/Pause** button, the ECO Drum Clean course begins.

CAUTION

- Using the ECO Drum Clean course, you can clean the drum without using a cleansing agent.
- Never use the ECO Drum Clean course when laundry is in the washing machine. This may result in damage to the texture or a problem with the washing machine.
- **In the ECO Drum Clean course, never use normal detergent.**
- **Use only 1/10 of the amount of the drum cleansing agent recommended by the cleansing agent manufacturer.**
- Since using a chlorine bleaching agent may discolour the product, be sure to use only oxygen bleaching agents.
- Powder-type cleansing agent: Use a [powder-type bleaching agent] or a [cleansing agent for drum cleaning only].
- Liquid-type cleansing agent: Use a [liquid-type oxygen bleaching agent] or a [cleansing agent for drum cleaning only].

The ECO Drum Clean Auto Alarm Function

- If the “ECO Drum Clean” indicator on the display is lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by performing the ECO Drum Clean course.
- If you do not perform the ECO Drum Clean course, the “ECO Drum Clean” indicator on the display is turned off. However, the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned on again after two washes are performed. However, this will not result in a problem with the washing machine.

WF1802WPU2-03042Q_EN.indd Sec6:31 2011-12-02 9:58:53

cleaning and maintaining your washing machine

- Although generally, the ECO Drum Clean Auto Alarm appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.
- **In case of the alarm, please also clean the debris filter (refer to "Cleaning the debris filter" section on page 34). Otherwise the performance of the bubble function may lower down.**

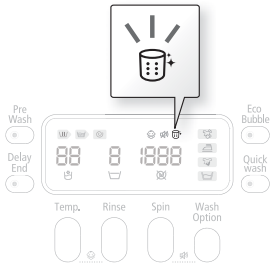

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover by pressing down and pulling its handle.

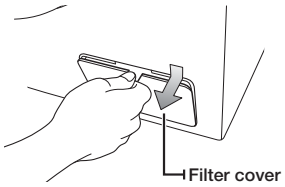

3. Open the emergency drain cap by pulling it.

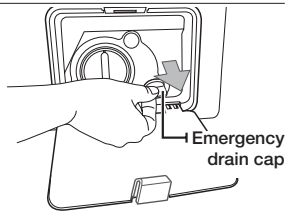

4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.

Remain water maybe more than you expected. Prepare larger bowl.

6. Reinsert the emergency drain cap and the drain tube.
7. Replace the filter-cover.

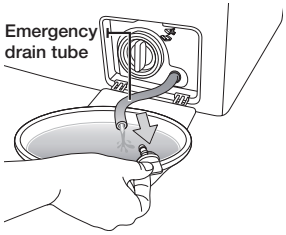

WF1802WPU2-03042Q_EN.indd Sec6:32 2011-12-02 9:58:54

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the rinse divider and the liquid detergent box(option) from the detergent drawer.

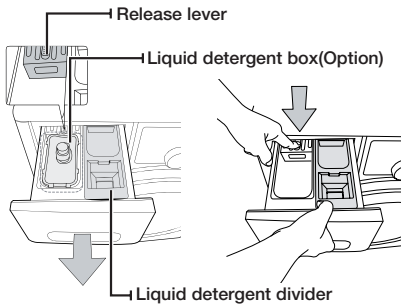

3. Wash all parts under running water.

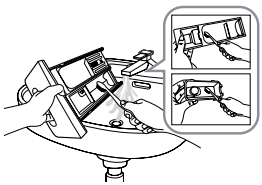

4. Clean the drawer recess with an old toothbrush.
5. Replace the rinse divider and the liquid detergent box (option) by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

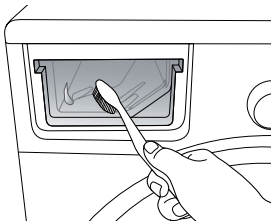

WF1802WPU2-03042Q_EN.indd Sec6:33 2011-12-02 9:58:56

cleaning and maintaining your washing machine

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous page.)

CAUTION Before cleaning the debris filter, make sure to unplug the power cord.

1. Remove the remaining water first (refer to "Draining the washing machine in an emergency" on page 32.)

   If you separate the filter without draining the remaining water, the remaining water may trickle out.
2. Open the filter cover by using a key or coin.
3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
4. Unscrew the debris filter cap.

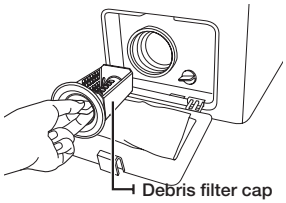

5. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
6. Replace the debris filter cap.
7. Replace the filter cover.

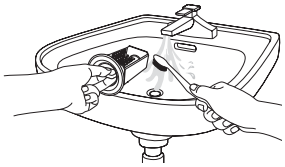

CAUTION Do not open the debris filter cap while the machine is running or hot water may flow out.

- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WF1802WPU2-03042Q_EN.indd Sec6:34 2011-12-02 9:58:57

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of "4E" is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

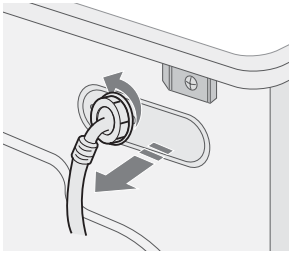

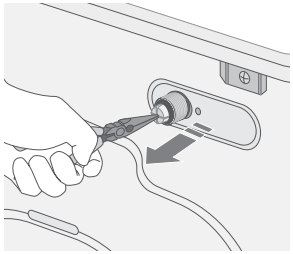

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the Quick Wash cycle and add bleach to the bleach compartment. Run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WF1802WPU2-03042Q_EN.indd Sec6:35 2011-12-02 9:58:58

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remains in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• Make sure all the water in your drum is drained out. • Make sure the door lock light is off. Door lock light will off after drained.
The drain pump generates a strange noise.	• Check if the drain pump is blocked by flocks or dirt . Clean the debris filter to abate noise.

If the problem persists, contact your local Samsung Customer Service.

WF1802WPU2-03042Q_EN.indd Sec7:36 2011-12-02 9:58:59

INFORMATION CODES

When your washing machine malfunctions, you may see an information code on the display. If that happens, check this table and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Make sure the door is firmly closed. • Make sure that laundry is not caught in the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of denim, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E	• Call the after-sales service.
Sud	• This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds.(This is one of the normal operations. It is an error for preventing non-sensing faults.)
Uc	• If the voltage of the supplied power is instable, the washing machine will be paused to protect its electric devices. • If the correct voltage is supplied, the cycle will resume automatically.

For any codes not listed above, or if the suggested solution doesn’t fix the problem, call your Samsung Service Centre or local Samsung dealer.

WF1802WPU2-03042Q_EN.indd Sec7:37 2011-12-02 9:58:59

calibrating your washing machine

CALIBRATION MODE

Samsung washing machine detects the laundry weight automatically. For more accurate weight detection, please run Calibration Mode after the installation. Calibration mode is done by following the steps below.

1. Remove laundry or any contents in the machine and turn off the machine.
2. Press the **Temp** button and **Delay End** button simultaneously, and press the **Power** button in addition.
   Then the machine turns on.
3. Press the **Start/Pause** button to activate "Calibration Mode".
4. The drum rotates clockwise and counterclockwise approximately for 3 minutes.
5. When "Calibration Mode" is finished, "End (En)" appears on the display, and the machine automatically turns off. The washing machine is now ready for use.

WF1802WPU2-03042Q_EN.indd Sec7-1:38 2011-12-02 9:58:59

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)		Detergent			Max Temp (℃)	Spin Speed(MAX) rpm	
	WF1804 WF1802	WF1704 WF1702	Pre-wash	wash	Softener		WF1804 WF1704	WF1802 WF1702
Cotton	8.0	7.0	●	yes	●	95	1400	1200
Synthetics	3.0	3.0	●	yes	●	60	1200	1200
Denim	3.0	3.0	●	yes	●	60	800	800
Bedding	2.0	2.0	●	yes	●	40	800	800
Dark Garment	4.0	3.0	●	yes	●	40	1200	1200
Daily Wash	4.0	3.0	●	yes	●	60	1400	1200
Eco Drum Clean	-	-	-	yes	-	70	400	400
Super Eco Wash	4.0	3.0	-	yes	●	40	1200	1200
Outdoor Care	2.0	2.0	-	yes	●	40	1200	1200
Baby Care	4.0	3.0	●	yes	●	95	1400	1200
Wool	2.0	2.0	-	yes	●	40	800	800
Hand Wash	2.0	2.0	-	yes	●	40	400	400

PROGRAM	Eco Bubble	Delay End	Quick Wash	Easy Iron	Intensive	Soak	Cycle time (min)
Cotton	●	●	●	●	●	●	130
Synthetics	●	●	-	●	●	●	91
Denim	●	●	-	●	●	●	80
Bedding	●	●	-	●	●	●	99
Dark Garment	●	●	-	●	●	-	79
Daily Wash	●	●	-	●	-	●	55
Eco Drum Clean	-	●	-	-	-	-	86
Super Eco Wash	●	●	-	●	●	-	94
Outdoor Care	●	●	-	-	-	-	79
Baby Care	●	●	-	●	●	●	133
Wool	●	●	-	-	-	-	35
Hand Wash	●	●	-	-	-	-	31

1. A cycle with a prewash takes approx. 15 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC60456/ EN60456.
   Please run Calibration Mode after the installation (see page 38).
3. Cotton 40℃/60℃ + intensive + Eco bubble are programs according to EN60456.
4. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
5. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

WF1802WPU2-03042Q_EN.indd Sec8:39 2011-12-02 9:58:59

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing, and dry cleaning when necessary.
The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundering problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
	Item may be washed at 95 ˚C		Can be dry cleaned using any solvent
	Item may be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WF1802WPU2-03042Q_EN.indd Sec9:40 2011-12-02 9:58:59

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE	
DIMENSIONS			WF1804 / WF1802	
			W600mm X D600mm X H850mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			56 ℓ	
NET WEIGHT			WF1804	WF1802
			70 kg	69 kg
WASH AND SPIN CAPACITY			8.0 kg	
POWER CONSUMPTION	WASHING	220 V	150 W	
		240 V	150 W	
	WASH AND HEATING	220 V	2000 W	
		240 V	2400 W	
	SPIN	MODEL	WF1804	WF1802
		230V	600 W	550 W
	PUMPING		34 W	
PACKAGE WEIGHT	PAPER		2 kg	
	PLASTIC		0.5 kg	
SPIN REVOLUTIONS	MODEL		WF1804	WF1802
	rpm		1400	1200

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WF1802WPU2-03042Q_EN.indd Sec9:41 2011-12-02 9:59:03

appendix

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE	
DIMENSIONS			WF1704 / WF1702	
			W600mm X D600mm X H850mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			49 ℓ	
NET WEIGHT			WF1704	WF1702
			69 kg	68 kg
WASH AND SPIN CAPACITY			7.0 kg	
POWER CONSUMPTION	WASHING	220 V	150 W	
		240 V	150 W	
	WASH AND HEATING	220 V	2000 W	
		240 V	2400 W	
	SPIN	MODEL	WF1704	WF1702
		230V	600 W	550 W
	PUMPING		34 W	
PACKAGE WEIGHT	PAPER		2 kg	
	PLASTIC		0.5 kg	
SPIN REVOLUTIONS	MODEL		WF1704	WF1702
	rpm		1400	1200

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WF1802WPU2-03042Q_EN.indd Sec9:42 2011-12-02 9:59:03

memo

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
Egypt	08000-726786	www.samsung.com

Code No. DC68-03042Q_EN

WF1802WPU2-03042Q_EN.indd Sec9:44 2011-12-02 9:59:04

WF1804WP(C/N/Q/S/U/V/W/Y)
WF1802WP(C/N/Q/S/U/V/W/Y)
WF1804YP(C/N/Q/S/U/V/W/Y)
WF1802YP(C/N/Q/S/U/V/W/Y)
WF1704WP(C/N/Q/S/U/V/W/Y)
WF1702WP(C/N/Q/S/U/V/W/Y)
WF1704YP(C/N/Q/S/U/V/W/Y)
WF1702YP(C/N/Q/S/U/V/W/Y)

غسالة ملابس

دليل المستخدم

إمكانات هائلة

نشكرك على شراء هذا المنتج من Samsung.
للحصول على خدمة أكثر تكاملاً, الرجاء تسجيل المنتج على موقع

www.samsung.com/register

SAMSUNG

WF1802WPU2-03042Q_AR.indd 1 12/1/2011 9:32:34 PM

ميزات الغسالة الجديدة من Samsung

ستغير غسالتك الجديدة رؤيتك لعملية الغسيل، حيث تتميز غسالة Samsung بوجود كافة الميزات التي تُحوّل المهام غير المرغوبة إلى عمل ممتع، بدءاً من سعتها ذات الحجم الفائق وحتى استهلاكها الاقتصادي للطاقة.

- **غسل بالفقاعات صديق للبيئة**

تزفر ميزة Eco Bubble (الفقاعات صديقة البيئة) الفعّالة من Samsung نظافة أفضل مع عناية متقدمة بالأقمشة، حيث تسمح هذه الميزة بتوزيع المسحوق بالتساوي وتخلله داخل الأنسجة بشكلٍ أسرع وأعمق.

- **الغسل السريع**

وداعاً لإهدار الوقت! حيث تسمح لك دورة Quick Wash (الغسل السريع) في ١٥ دقيقة بإمكانية غسل الملابس وارتدائها في وقت قصير.
يمكن أن يساعدك برنامج Quick Wash (الغسل السريع) إذا كانت حياتك مزدحمة بالمهام، حيث يمكنك الآن غسل ملابسك المفضلة (حتى ٢ كجم) خلال ١٥ دقيقة!

- **العناية بملابس الخروج**

يتيح لك استخدام غسالة Samsung المزودة بتقنية Eco Bubble (الغسل بالفقاعات صديق البيئة) إمكانية غسل الملابس المقاومة للمياه بشكل مريح جداً، علمًا بأن الغسالة توفر لك عناية فائقة لملابس الخروج. كما تعمل "الوسادة الرغوية" الناجّة عن Eco Bubble (الفقاعات صديقة البيئة) على حماية الملابس من التلف الناجّ عن كشط الطبقة المقاومة للمياه وتقليل التلف الذي قد يحدث لملابس الخروج، إلى جانب حماية الملابس ذات المنسوجات الرقيقة.

- **العناية بملابس الأطفال**

تتضمن غسالة Samsung برامج غسل تعمل على حماية ملابس الأطفال ذوي البشرة الحساسة.
حيث تم إعداد هذه البرامج لتقليل التهابات البشرة عند الأطفال عن طريق تقليل بقايا مسحوق الغسل. وبالإضافة إلى ذلك، فإن هذه البرامج تصنف الملابس إلى أنواع مختلفة يتم غسلها وفقًا لخصائص كل نوع بحيث يشعر الأطفال بالانتعاش من نظافة الملابس عند ارتدائها.

- **المحافظ على الصوف**

تم اختبار هذه الغسالة وثبتت تفوقها على المواصفات التي حددتها شركة Woolmark لغسل المنتجات الصوفية في الغسالة، حيث تمثل علامة Wool Certified درجة اعتمادية أعلى من علامة Woolmark الحالية، وهذا بدوره يضمن لك أداءً فائقًا للغسالة بالإضافة إلى العناية بالأقمشة الصوفية، ومع ذلك، يجب غسل الملابس وفقًا للإرشادات المدونة على الملصق الموجود على الملابس كما حددتها شركتي Woolmark وSamsung.

- **الغسل اليدوي**

يمكنك أن تحظى بعناية خاصة بغسل ملابسك عن طريق تحديد درجة حرارة ملائمة ودورة غسل هادئة وكمية ماء مناسبة.

WF1802WPU2-03042Q_AR.indd Sec1:2 12/1/2011 9:32:40 PM

- **تنظيف الحاوية صديق البيئة**

يساعد استخدام ميزة Eco Drum Clean (تنظيف الحاوية صديق البيئة) في الحفاظ على نظافة الغسالة حتى دون استخدام أي منظفات أو مبيضات. بذلك، يمكنك الحفاظ على نظافة الحاوية ورائحتها مع هذا البرنامج المتخصص للتنظيف.

- **التأمين ضد عبث الأطفال**

تضمن وظيفة Child Lock (التأمين ضد عبث الأطفال) الحفاظ على الغسالة ضد عبث الأطفال.
حيث تعمل ميزة الأمان هذه على منع الأطفال من العبث بتشغيل الغسالة بالإضافة إلى التنبيه عند تشغيلها.

- **تأجيل التوقف**

تعمل هذه الميزة على تأجيل الدورة حتى ١٩ ساعة تضاف ساعة بعد ساعة وزيادة سهولة استخدام الغسالة لاسيما عندما ترغب في الذهاب للخارج.

- **لوحة عرض رسومية رقمية**

تتميز "لوحة العرض الرسومية الرقمية" بوضوحها وسهولة استخدامها مما يعمل على تقليل الضوضاء والمقاطعة إلى أدنى حد. كما تتيح لك "لوحة العرض الرسومية الرقمية" بالإضافة إلى سهولة تشغيلها إجراء عمليات الضبط بسرعة ودقة للحصول على نتائج غسيل فائقة.

- **باب واسع**

استمتع بفتحة باب عريضة جدًا لمتابعة عملية الغسل بسهولة! وفضلاً عن ذلك، يمكنك إضافة قطع الملابس وإخراجها بسهولة، وخصوصًا القطع كبيرة الحجم، مثل المفروشات والمناشف وغيرها.

- **خرطوم المياه ومستشعر التسرب (في طرازات محددة)**

يتكون نظام أمان المياه الخاص بغسالة Samsung الذي تم تصميمه بشكل متطور من خرطوم متين يعمل على توقف تسرب المياه في مصدر الغسالة ومستشعر التسرب بالأسفل. إذا تم كسر الخرطوم أو تم اكتشاف تسرب مياه، يقوم الجزء الإسفنجي الداخلي بالتمدد حتى يتم منع تسرب المياه من السدادة.

- **سخان خزفي للمتانة وتوفير الطاقة (طرازات محددة)**

يتميز "السخان الخزفي" المبتكر بقوة مضاعفة تفوق السخانات العادية.
وهذا بدوره يوفر تكاليف الصيانة والإصلاحات. وبالإضافة إلى ذلك، فإنه يخفف من حدة الماء الساخن على الملابس ويوفر الطاقة.

يتضمن هذا الدليل معلومات مهمة حول عملية التركيب والاستخدام والعناية بغسالة Samsung الجديدة. يمكنك الرجوع إليه للتعرّف على وظائف لوحة التحكم، وللحصول على تعليمات حول كيفية استخدام الغسالة. بالإضافة إلى الحصول على تلميحات لتحقيق أقصى استفادة من أحدث الميزات والإمكانات المتوفرة بها. يرشدك القسم "استكشاف المشاكل وحلها ورموز المعلومات" الوارد في الصفحة ٣٦ إلى ما يتوجب عليك فعله في حالة حدوث عطل بالغسالة الجديدة.

WF1802WPU2-03042Q_AR.indd Sec1:3 12/1/2011 9:32:40 PM

معلومات السلامة

تهانينا على شرائك غسالة ™ActivFresh الجديدة من Samsung. يتضمن هذا الدليل معلومات هامة حول عملية تركيب الجهاز واستخدامه والعناية به. الرجاء قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة المتوفرة بالغسالة.

ما يجب أن تعرفه حول إرشادات السلامة

يرجى قراءة هذا الدليل بعناية لضمان معرفة كيفية تشغيل الميزات والوظائف المتعددة لجهازك الجديد بسلامة وفاعلية. كما يجب الاحتفاظ به في مكان آمن بالقرب من الجهاز للرجوع إليه في المستقبل. استخدم هذا الجهاز للغرض المُخصص له فقط على النحو الموضح في دليل الإرشادات الذي بين يديك.

لا تغطي التحذيرات وإرشادات السلامة الهامة الواردة في هذا الدليل كافة الظروف والمواقف المحتمل حدوثها. لذا يقع على عاتقك مسؤولية اتباع المنطق السليم والتعامل بحذر ومراعاة الانتباه عند تركيب الغسالة وصيانتها وتشغيلها.

ونظرًا لأن إرشادات التشغيل التالية تنطبق على طُرز متعددة، فإن خصائص الغسالة التي تستعملها قد تختلف قليلاً عن تلك الموصوفة في هذا الدليل. كما أن بعض علامات التحذير المذكورة قد تكون غير قابلة للتطبيق. إذا كانت لديك أي أسئلة أو مخاوف، اتصل بأقرب مركز خدمة أو ابحث عن التعليمات والمعلومات عبر الإنترنت على موقع www.samsung.com.

الرموز والاحتياطات المهمة للسلامة

تشير الرموز والعلامات الموجودة في دليل المستخدم الذي بين يديك إلى ما يلي:

حذير	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى **إصابات خطيرة للأشخاص و/أو الموت و/أو تلف في الممتلكات**.
تنبيه	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات للأشخاص و/أو تلف في الممتلكات**.
تنبيه	لتقليل احتمالات نشوب حريق أو حدوث انفجار أو التعرّض لصدمة كهربية أو إصابة جسدية أثناء استخدام الغسالة، اتّبع احتياطات السلامة الأساسية التالية:

	ممنوع المحاولة.
	ممنوع الفك.
	ممنوع اللمس.
	اتّبع الإرشادات بعناية.
	افصل قابس التيار الكهربي من مقبس الحائط.
	تأكد من توصيل الغسالة بطرف أرضي لمنع التعرّض لصدمة كهربية.
	اتصل بمركز الخدمة للحصول على تعليمات.
	ملاحظة

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.
لذا، يرجى اتباعها بعناية.
وبعد قراءة هذا الدليل، احتفظ به في مكان آمن للرجوع إليه في المستقبل.

- اقرأ جميع الإرشادات أولاً قبل استخدام الجهاز.

يوجد احتمال التعرض للمخاطر، كما هو الحال مع أي أجهزة تستخدم الطاقة الكهربية والأجزاء المتحركة. ولتشغيل هذا الجهاز بأمان، يجب عليك التعرّف على طريقة تشغيله وتوخي الحذر أثناء استخدامه.

WF1802WPU2-03042Q_AR.indd Sec2:4 12/1/2011 9:32:40 PM

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها. حيث لا يمكن فتح باب الغسالة بسهولة من الداخل. وقد يصاب الأطفال بإصابات بالغة الخطورة في حالة احتباسهم بداخلها.

تحذير

لم يتم تصميم هذا الجهاز ليستخدمه أشخاص من ذوي الاحتياجات الخاصة أو من تنقصهم المعرفة والخبرة (بما في ذلك الأطفال)، إلا إذا كانوا تحت إشراف شخص مسؤول عن سلامتهم.

تجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

في حالة تلف القابس (سلك التيار الكهربي)، يجب تغييره بواسطة الشركة المصنعة أو وكيل الصيانة أو أي شخص مؤهل مماثل لتجنب التعرض لأي خطر.

يجب وضع الجهاز بالقرب من قابس التيار الكهربي، وصنابير التزوّد بالماء وأنابيب تصريف الماء، بحيث يسهل الوصول إليها.

بالنسبة للغسالات ذات فتحات تهوية بقاعدتها، تأكد من عدم سد السجاد أو أية عوائق أخرى لهذه الفتحات.

يُنصح باستخدام مجموعة خراطيم جديدة وعدم استخدام الخراطيم القديمة مرةً أخرى.

WF1802WPU2-03042Q_AR.indd Sec2:5 12/1/2011 9:32:41 PM

معلومات السلامة

علامات التحذير الصارمة المتعلقة بالتركيب

تحذير

يجب تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.
- قد ينتج عن الفشل في إتباع هذه التعليمات حدوث صدمة كهربية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

يجب توخي الحذر عند رفع الجهاز لأن وزنه ثقيل

قم بتوصيل سلك الطاقة بمقبس حائط بجهد من ٢٢٠ إلى ٢٤٠ فولت تيار متردد/ ٥٠ هرتز أو أعلى من ذلك. ولا تستخدم المقبس إلا لتشغيل هذا الجهاز. بالإضافة إلى ذلك يجب عدم استخدام سلك تمديد.
- قد تؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام مشترك كهرباء أو مد سلك التيار الكهربي إلى حدوث صدمة كهربية أو نشوب حريق.
- تأكد من تطابق كل من الجهد الكهربي والتردد والتيار مع القياسات الخاصة بمواصفات المنتج. قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق. وكذلك الفشل في إدخال قابس التيار الكهربي في مقبس الحائط بإحكام.

قم بإزالة أي مواد غريبة، مثل الأتربة أو الماء من النهايات الطرفية لقابس التيار الكهربي ونقاط الاتصال باستخدام قطعة قماش جافة بانتظام.
- افصل قابس التيار الكهربي ونظفه باستخدام قطعة قماش جافة.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

أدخل قابس التيار الكهربي في مقبس الحائط في الاتجاه الصحيح بحيث يكون اتجاه السلك ناحية الأرض.
- إذا قمت بإدخال قابس الطاقة في المقبس في الاتجاه المعاكس، فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل وقد يؤدي هذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

احتفظ بجميع مواد التعبئة والتغليف بعيدة تمامًا عن متناول أيدي الأطفال. نظرًا لأنها قد تمثل خطرًا عليهم.
- قد يؤدي وضع الطفل لكيس من أكياس التغليف فوق رأسه إلى إصابته بالاختناق.

في حالة تلف الجهاز أو قابس التيار الكهربي أو سلك التيار الكهربائي، اتصل بأقرب مركز صيانة.

يجب توصيل الجهاز بالأرضي بشكل سليم.
لا تقم بتوصيل الجهاز بالأرضي بالقرب من أنبوب غاز أو أنبوب ماء بلاستيكي أو سلك تليفون.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار أو مشاكل بالمنتج
- يجب عدم توصيل سلك التيار الكهربي بمأخذ لم يتم توصيله بأرضي بشكل صحيح. وتأكد من أن ذلك يتم وفقًا للقواعد المحلية والقومية.

يجب عدم تركيب هذا الجهاز بالقرب من سخان أو مواد قابلة للاشتعال.
كما يجب عدم تركيب هذا الجهاز في بيئة رطبة أو موقع به زيت أو أتربة أو في مكان يتعرض لضوء الشمس المباشر والماء (قطرات المطر).

يجب عدم تركيب هذا الجهاز في مكان درجة حرارته منخفضة
- قد يؤدي الجليد إلى انفجار الأنابيب

يجب عدم تركيب هذا الجهاز في موقع يكون به تسرب للغاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

لا تستخدم محولاً كهربيًا.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

لا تستخدم قابس تيار كهربي أو سلك تيار كهربي تالفًا أو مقبس حائط غير مُحكم.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

يجب عدم جذب سلك التيار الكهربي أو ثنيه بقوة.
يجب عدم لف سلك الطاقة أو طيه.
يجب عدم تعليق سلك الطاقة فوق شيء معدني أو وضع شيء ثقيل فوق سلك التيار الكهربي أو تمرير سلك التيار الكهربي بين أشياء أو دفع سلك التيار الكهربي في المساحة الموجودة خلف الجهاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

WF1802WPU2-03042Q_AR.indd Sec2:6 12/1/2011 9:32:41 PM

يجب عدم جذب سلك الطاقة عند فصل قابس التيار الكهربي.
- افصل قابس التيار الكهربي عن طريق الإمساك بالقابس.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

لا تضع سلك الطاقة والأنابيب في مكان قد يعرّضك للتعثّر والسقوط فوقها.

تنبيه علامات التنبيه المتعلقة بالتركيب

- يجب وضع هذا الجهاز بطريقة يمكن من خلالها الوصول إلى قابس التيار الكهربي.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق نتيجة لتسريب الكهرباء.

يجب تركيب الجهاز على أرضية مستوية وصلبة تتحمل وزن الجهاز.
- قد ينتج عن الفشل في إتباع هذه التعليمات وجود اهتزازات أو حَركات أو ضوضاء أو مشاكل غير طبيعية مع المنتج.

تحذير علامات التحذير الصارمة المتعلقة بالاستخدام

- في حالة تعرض الجهاز لكمية زائدة من الماء، قم بقطع توريد الماء وقطع اتصال الكهرباء بشكل فوري واتصل بأقرب مركز صيانة.
- لا تلمس سلك التيار الكهربي بيدين مُبتلتين
- قد يؤدي الفشل في الالتزام بذلك إلى حدوث صدمة كهربية

في حالة إصدار الجهاز لضوضاء غير طبيعية أو رائحة اشتعال أو دخان، افصل قابس التيار الكهربي فورًا واتصل بأقرب مركز صيانة.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

في حالة وجود تسريب للغاز (مثل غاز البروبان أو الغاز النفطي المُسال، وما إلى ذلك)، يجب تهوية المكان فورًا بدون لمس قابس التيار الكهربي. لا تقم بلمس الجهاز أو سلك التيار الكهربي.
- لا تستخدم مروحة تهوية.
- قد ينتج عن الشرارة حدوث صدمة كهربية أو نشوب حريق.

لا تدع الأطفال يلعبون فوق الغسالة أو بداخلها. كذلك، يجب فصل حامل باب الغسالة عند التخلص من الجهاز.
- في حالة الانحشار داخل الغسالة، قد يتعرض الطفل للاحتجاز والاختناق حتى الموت.

تأكد من إزالة الغلاف (الإسفنج / الفوم) الموجود أسفل الغسالة قبل الاستخدام.

WF1802WPU2-03042Q_AR.indd Sec2:7 12/1/2011 9:32:41 PM

معلومات السلامة

يجب عدم غسل العناصر الملوثة بالجازولين أو الكيروسين أو البنزين أو مرقق الطلاء أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.

يجب عدم فتح باب الغسالة بالقوة أثناء التشغيل (الغسيل/التجفيف/العصر عند درجة حرارة عالية).

- قد ينتج عن اندفاع الماء خارج الغسالة الإصابة بالحروق أو التسبب في أن تصبح الأرض منزلقة.

قد ينتج عن ذلك حدوث إصابات.

- قد يؤدي فتح الباب بالقوة إلى تلف المنتج أو حدوث إصابة.

لا تضع يدك تحت الغسالة.

- قد ينتج عن ذلك حدوث إصابات.

لا تلمس قابس التيار الكهربي بيدين مُبتلتين.

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية.

يجب عدم إيقاف تشغيل الغسالة بفصل قابس التيار الكهربي أثناء تشغيلها.

- قد يؤدي إدخال قابس التيار الكهربي مرة أخرى في مأخذ الحائط إلى حدوث شرارة ينتج عنها صدمة كهربية أو نشوب حريق.

يجب عدم السماح للأطفال أو الأفراد غير المؤهلين باستخدام هذه الغسالة بدون إشراف. يجب عدم السماح للأطفال بالتسلق فوق الغسالة

- قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حروق أو إصابة.

لا تضع يدك أو أي كائن معدني أسفل الغسالة أثناء تشغيلها.

- قد ينتج عن ذلك حدوث إصابات.

يجب عدم فصل الجهاز عن طريق جذب سلك الطاقة. بل يجب دائمًا إمساك القابس بإحكام وسحبه في خط مستقيم من مأخذ الكهرباء.

- قد يؤدي تلف السلك إلى حدوث عطل تماس و/أو حريق و/أو صدمة كهربية

لا تحاول إصلاح الجهاز أو فكّه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني. وما إلى ذلك) خلاف المنصهر القياسي.
- في حالة وجود حاجة لإصلاح الجهاز أو إعادة تركيبه. اتصل بأقرب مركز صيانة إليك.
- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربية أو نشوب حريق أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

في حالة دخول أي مادة غريبة، مثل الماء إلى الجهاز، قم بفصل قابس التيار الكهربي واتصل بأقرب مركز صيانة.

- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

عندما يصبح خرطوم توريد الماء غير محكم الربط من ناحية الصنبور وينتج عنه تسرب ماء إلى داخل الجهاز، قم بفصل قابس التيار الكهربي.

- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

يجب فصل قابس التيار الكهربي عند عدم استخدام الجهاز لفترات طويلة أو أثناء العواصف الرعدية أو البرق.

- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

WF1802WPU2-03042Q_AR.indd Sec2:8 12/1/2011 9:32:41 PM

علامات التنبيه المتعلقة بالاستخدام

تنبيه

عندما يعلق بالغسالة مادة غريبة، مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، افصل قابس التيار الكهربي ونظّف الغسالة باستخدام قطعة قماش رطبة وناعمة.

- قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث تغيير في ألوان الغسالة أو تشويه أو تلف أو صدأ بها.

قد ينكسر الزجاج الأمامي نتيجة حدوث اصطدام قوي. ولذلك يجب الحرص عند استخدام الغسالة.

- قد تحدث إصابة عندما ينكسر الزجاج.

عند حدوث فشل في توريد الماء أو عند إعادة توصيل خرطوم توريد الماء، يجب فتح الصنبور ببطء.
يجب فتح الصنبور ببطء في حالة عدم الاستخدام لفترة طويلة.

- قد يؤدي ضغط الهواء في خرطوم توريد الماء أو أنبوب الماء إلى تلف جزء من الغسالة أو وجود تسرب للماء.

في حالة حدوث خطأ بالتصريف أثناء التشغيل، تحقق من عدم وجود مشكلة تتعلق بالتصريف.

- قد يؤدي استخدام الغسالة أثناء تسرب المياه منها نتيجة وجود مشكلة بالتصريف إلى الإصابة بصدمة كهربية أو نشوب حريق نتيجة تسرب كهربي.

يجب إدخال الملابس بالكامل في الغسالة بحيث لا تعلق بالباب.

- قد يؤدي تعلق الملابس بالباب إلى تلف الملابس أو الغسالة، كما قد ينتج عنه حدوث تسرب للماء.

تأكد من إغلاق الصنبور في حالة عدم استخدام الغسالة.

- تأكد من ربط مسمار وصلة خرطوم توريد الماء القلاووظ بإحكام.
- قد يؤدي الفشل في الالتزام بهذا الأمر إلى تلف الجهاز أو حدوث إصابات.

تأكد من عدم التصاق أي مواد غريبة بالحاجز المطاطي والزجاج الأمامي للباب (على سبيل المثال، مخلفات أو خيوط أو شعر، وما إلى ذلك.)

- في حالة تعلق مواد غريبة بالباب أو لم يكن الباب مغلقًا بالكامل، فقد يتسبب ذلك في تسرب الماء.

يجب فتح الصنبور والتحقق من ربط موصل خرطوم الماء بإحكام وعدم وجود تسريب للماء قبل استخدام المنتج.

- في حالة عدم إحكام ربط المسامير أو وصلة خرطوم توريد الماء، قد يحدث تسريب للماء.

لتقليل مخاطر حدوث حريق أو انفجار:

- في بعض الحالات، قد يتكون غاز الهيدروجين عند استخدام نظام الماء الساخن، كما هو الحال بالنسبة لسخان الماء الذي لم يُستخدم لمدة أسبوعين أو أكثر. وحيث إن غاز الهيدروجين قابل للانفجار، ففي حالة عدم استخدام نظام الماء الساخن لمدة أسبوعين أو أكثر، قم بفتح كافة صنابير الماء الساخن الموجودة في المنزل، ودع الماء يتدفق لبضعة دقائق قبل استخدام الغسالة، حيث يعمل ذلك على التخلص من غاز الهيدروجين الذي تم تكوينه داخل الصنابير. ونظرًا لأن غاز الهيدروجين قابل للاشتعال، يجب عدم التدخين أو إشعال أي لهب في هذا الوقت، كما يجب إجراء تهوية فورية قبل لمس قابس التيار الكهربي في حالة وجود تسريب للغاز.

تم تصميم الجهاز للاستخدام المنزلي والأغراض المنزلية فقط.

يُعد استخدام المنتج لأغراض العمل سوء استخدام له، وفي هذه الحالة، لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung، كما أن شركة Samsung لا تتحمل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

WF1802WPU2-03042Q_AR.indd Sec2:9 12/1/2011 9:32:42 PM

معلومات السلامة

يجب عدم الوقوف على الجهاز أو وضع أشياء فوقه (مثل ملابس الغسيل أو شموع مُضاءة أو سجائر مشتعلة أو أطباق أو مواد كيماوية أو أشياء معدنية، وما إلى ذلك).

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالمنتج أو وقوع إصابات.

يجب عدم رش مواد متطايرة، مثل المبيدات الحشرية، فوق سطح الجهاز.

- بالإضافة إلى أن هذا الأمر يضر بالإنسان، فقد ينتج عنه أيضًا الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالمنتج.

لا تضع شيئًا ينتج عنه مجال كهرومغناطيسي بالقرب من الغسالة.

- قد ينتج عن هذا حدوث إصابات شخصية نتيجة وجود خلل في وظائف التشغيل.

نظرًا لأن الماء الذي يتم تصريفه أثناء الغسيل بدرجات حرارة عالية أو أثناء دورة التجفيف يكون ساخنًا، يجب عدم لمسه.

- قد ينتج عن هذا الأمر حدوث حروق أو إصابات شخصية.

يجب عدم غسل مفروشات المقاعد أو السجاد أو الأقمشة (*) المقاومة للماء أو عصرها أو تجفيفها ما لم يكن جهازك يتضمن برنامجًا خاصًا لغسلها.

- يجب عدم غسل السجاد السميك أو الثقيل حتى في حالة وجود علامة الغسالة على بطاقة العناية بالمنتج.
- قد يؤدي هذا الأمر إلى حدوث إصابة أو تلف بالغسالة أو بالحوائط أو بالأرضية أو بالملابس نتيجة للاهتزازات غير الطبيعية.

* المفروشات الصوفية أو الأغطية المقاومة للأمطار أو سترات الصيد أو بنطلونات التزلج أو حقائب النوم أو أغطية الحفاضات أو الملابس الرياضية أو أغطية الدراجات والدراجات البخارية والسيارات، وما إلى ذلك.

يجب عدم تشغيل الغسالة في حالة عدم وجود درج المسحوق.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو إصابة جسدية نتيجة لتسرب الماء.

يجب عدم لمس الحوض من الداخل أثناء عملية التجفيف أو بعدها مباشرةً؛ حيث يكون ساخنًا.

- قد ينتج عن هذا الأمر الإصابة بحروق.

لا تضع يدك في درج المسحوق بعد فتحه.

- قد ينتج عن هذا الأمر حدوث إصابة جسدية حيث قد تعلق يدك بجهاز إدخال المسحوق بيدك. كما يجب عدم وضع أي أشياء (مثل الأحذية أو بقايا الطعام أو الحيوانات) خلاف الغسيل في الغسالة.
- قد يؤدي هذا الأمر إلى تلف الغسالة أو حدوث إصابة ووفاة في حالة وجود حيوانات أليفة نتيجة للاهتزازات غير الطبيعية.

يجب عدم الضغط على الأزرار باستخدام أدوات حادة، مثل المسامير أو السكاكين أو الأظافر، وما إلى ذلك.

- قد ينتج عن ذلك حدوث صدمة كهربية أو إصابة.

يُحظر غسل الملابس التي تحتوي على زيوت أو كريمات أو مستحضرات سائلة، والتي توجد في متاجر المستحضرات الجلدية أو عيادات التدليك عادةً.

- قد ينتج عن هذا الأمر تشوه الحاجز المطاطي وتسرب الماء.

يجب عدم ترك أي أشياء معدنية، مثل الدبابيس أو دبابيس الشعر أو مواد التبييض، في الحوض لفترات طويلة من الوقت.

- قد يؤدي هذا الأمر إلى صدأ الحوض.
- وفي حالة بدء ظهور الصدأ على سطح الحوض، قم بتنظيف سطحه باستخدام سائل تنظيف (متعادل) وإسفنج في تنظيفه. ولا تستخدم فرشاة معدنية مطلقًا.

لا تستخدم سائل تنظيف جاف بشكل مباشر. ولا تغسل الملابس أو تشطفها أو تجففها في حالة إضافة مسحوق تنظيف جاف إليها.

- قد يؤدي هذا الأمر إلى حدوث اشتعال فوري نتيجة للحرارة الناتجة عن تأكسد الزيت.

لا تستخدم الماء القادم من أجهزة تبريد/تسخين الماء.

- قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.

WF1802WPU2-03042Q_AR.indd Sec2:10 12/1/2011 9:32:42 PM

لا تستخدم صابون غسل يدين متعادل بالغسالة.
- في حالة تراكمه وتصلبه داخل الغسالة، قد تحدث مشاكل تتعلق بالمنتج مثل تغير الألوان أو الصدأ أو انبعاث روائح كريهة.

لا تغسل عناصر الغسيل كبيرة الحجم، مثل المفروشات، في شبكة الغسيل.
- يمكنك وضع الجوارب وحمالات الصدر في شبكة الغسيل وغسلها مع بقية ملابس الغسيل.
- يؤدي التقصير في الالتزام بهذا الأمر إلى حدوث إصابة نتيجة للاهتزازات غير الطبيعية.

لا تستخدم مسحوق غسيل متيبس.
- قد يحدث تسرب للماء في حالة تراكم هذا المسحوق المتيبس داخل الغسالة.

بالنسبة للغسالات ذات فتحات تهوية بقاعدتها، تأكد من عدم سد السجاد أو أية عوائق أخرى لهذه الفتحات.

تأكد من إفراغ جميع جيوب الملابس التي سيتم غسلها.
- قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو المسامير القلاووظ أو الأحجار في إحداث أضرار بالغة بالجهاز.

يجب عدم غسل الملابس المزوّدة بإبزيمات أو أزرار كبيرة الحجم أو أشياء معدنية أخرى ثقيلة الوزن بالغسالة.

تحذير علامات التحذير الصارمة المتعلقة بالتنظيف

لا تنظف الجهاز عن طريق رش الماء فوقه مباشرةً.
لا تستخدم البنزين أو مرقق الطلاء أو الكحول لتنظيف الجهاز.
- قد ينتج عن هذا الأمر حدوث تغير في الألوان أو تشويه أو حدوث صدمة كهربية أو نشوب حريق.

افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

WF1802WPU2-03042Q_AR.indd Sec2:11 12/1/2011 9:32:42 PM

المحتويات

إعداد الغسالة ١٣

١٣

١٣ فحص الأجزاء
١٤ استيفاء متطلبات التركيب
١٤ مصدر الطاقة الكهربية والتوصيل بطرف أرضي
١٤ تزويد الغسالة بالماء
١٥ التصريف
١٥ التثبيت الأرضي
١٥ درجة الحرارة المحيطة
١٥ تركيب القنطرة أو الخزانة
١٥ تركيب الغسالة

غسل الملابس ٢١

٢١

٢١ الغسل للمرة الأولى
٢١ إرشادات أساسية
٢٢ استخدام لوحة التحكم
٢٥ Child Lock (التأمين ضد عبث الأطفال)
٢٥ Sound off (إيقاف تشغيل الصوت)
٢٥ Delay End (تأجيل التوقف)
٢٦ Eco Bubble (الفقاعات صديقة البيئة)
٢٧ غسل الملابس باستخدام قرص اختيار الدورة
٢٨ غسل الملابس يدويًا
٢٩ معلومات حول مسحوق الغسيل والمواد الإضافية
٢٩ مسحوق الغسيل الذي يمكن استخدامه
٣٠ درج مسحوق الغسيل
٣٠ المنظف السائل (متوفر بطرازات محددة)

تنظيف الغسالة وصيانتها ٣١

٣١

٣١ تنظيف الحاوية صديق البيئة
٣٢ تصريف الماء من الغسالة عند الطوارئ
٣٣ تنظيف درج مسحوق الغسيل والجزء الداخلي منه
٣٤ تنظيف مصفاة المخلفات
٣٤ تنظيف الأسطح الخارجية
٣٥ تنظيف المصفاة الشبكية المتصلة بخرطوم الماء
٣٥ إصلاح غسالة متجمدة
٣٥ تخزين الغسالة

استكشاف المشاكل وحلها ورموز المعلومات ٣٦

٣٦

٣٦ تحقق مما يلي إذا كانت الغسالة...
٣٧ رموز المعلومات

معايرة الغسالة ٣٨

٣٨

٣٨ وضع المعايرة

جدول الدورات ٣٩

٣٩

٣٩ جدول الدورات

الملحق ٤٠

٤٠

٤٠ جدول العناية بالأقمشة
٤٠ حماية البيئة
٤٠ بيان التوافق
٤١ المواصفات

WF1802WPU2-03042Q_AR.indd Sec3:12 12/1/2011 9:32:42 PM

إعداد الغسالة

تأكد من اتّباع فني التركيب لهذه الإرشادات بدقة حتى تعمل غسالتك الجديدة بشكل صحيح ولتجنب مخاطر التعرّض للإصابة عند الغسيل.

فحص الأجزاء

أخرج الغسالة بحرص من صندوقها وتأكد من وجود كافة الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن أو عدم استلامك لكافة الأجزاء، اتصل بخدمة عملاء Samsung أو الموزّع المعتمد لدى Samsung.

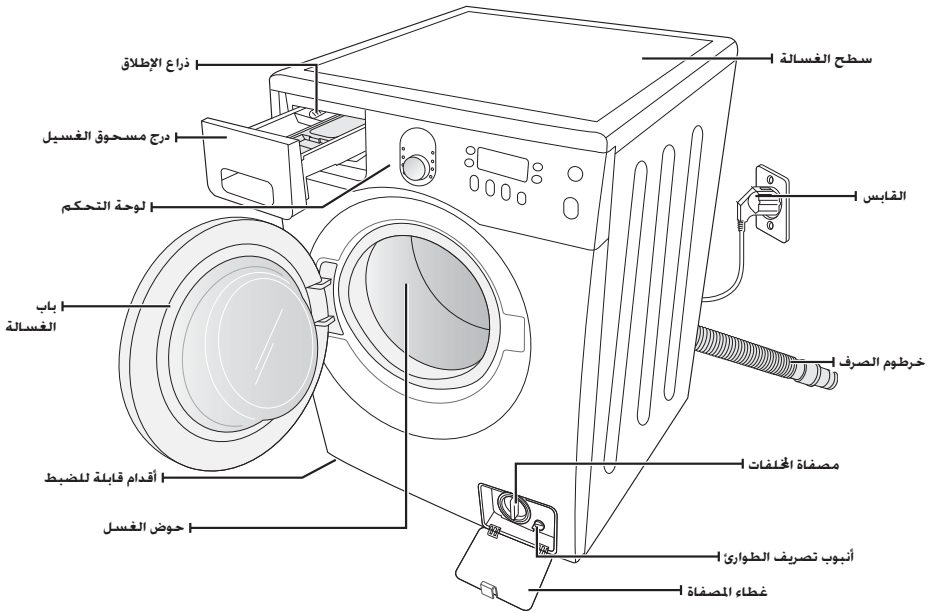

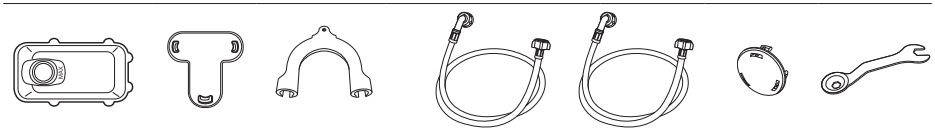

مفتاح الربط	٠ أغطية مفاتيح المسامير	بارد	ساخن (طرازات محددة) خرطوم التزود بالماء	حامل الخرطوم	مثبت الغطاء (طرازات محددة)	درج المنظف السائل (متوفر بطرازات محددة)

٠ **أغطية فتحات المسامير** : يختلف عدد أغطية فتحات المسامير باختلاف الطراز (من ٣ إلى ٥ أغطية).

WF1802WPU2-03042Q_AR.indd Sec4:13 12/1/2011 9:32:42 PM

إعداد الغسالة

استيفاء متطلبات التركيب

مصدر الطاقة الكهربية والتوصيل بطرف أرضي

لتفادي خطر حدوث حريق أو التعرض لصدمة كهربية أو إصابة جسدية، يجب أن تتم عملية توصيل الأسلاك والتوصيل الأرضي وفقًا لأحدث نسخة من اللائحة الوطنية للكهرباء ANSI/FNPA، رقم ٧٠ والقوانين والضوابط المحلية. يتحمل مالك هذا الجهاز مسؤولية توفير الصيانة الكهربائية الكافية للجهاز.

⚠ تحذير
ممنوع استخدام كبلات إضافية.
استخدم سلك التيار الكهربي المرفق مع الغسالة فقط.

عند الإعداد لعملية التركيب، تأكد أن مصدر التيار الكهربي يتوفر فيه:

- قاطع دائرة كهربية أو منصهر بجهد من ٢٢٠ إلى ٢٤٠ فولت / ٥٠ هرتز
- دائرة كهربية فرعية منفصلة تخدم تشغيل الغسالة فقط

يجب توصيل الغسالة بمأخذ أرضي. وفي حالة حدوث خلل أو تعطل في الأداء، يعمل التوصيل الأرضي على تقليل خطورة التعرض لصدمة كهربية، وذلك بتوفير مسار لأقل مقاومة للتيار الكهربي.
يتم تزويد الغسالة بسلك تيار كهربي به قابس طرف أرضي بثلاثة سنون لاستخدامه في مأخذ أرضي تم تركيبه بشكل صحيح.

لا تقم مطلقًا بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير الماء الساخن.

قد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى حدوث صدمة كهربية.
استشر فني كهرباء مؤهلاً أو فني صيانة إذا لم تكن متأكدًا من صحة التوصيل الأرضي للغسالة. ويُحظر تعديل القابس المرفق مع الغسالة. وفي حالة عدم توافقه مع مخرَج التيار، استعن بفني كهرباء مؤهلاً لتركيب مأخذ مناسب.

تزويد الغسالة بالماء

يتم ملء الغسالة بشكل سليم عندما يكون ضغط الماء من ٥٠ إلى ٨٠٠ كيلو باسكال. قد يتسبب ضغط الماء الأقل من ٥٠ كيلوباسكال في تلف صمام الماء، مما لا يسمح بإغلاقه بالكامل، أو قد تستغرق الغسالة وقتًا أطول مما تسمح به عناصر التحكم لملئها بالماء، مما ينتج عنه إيقاف تشغيل الغسالة. (يتم تضمين نظام تحديد وقت ملء الغسالة في عناصر التحكم والذي تم تصميمه للحد من عمليات تدفق/فيضان الماء في حالة ارتخاء الخرطوم الداخلي.)
يجب أن تكون صنابير الماء على بُعد ٤ أقدام (١٢٢ سم) من الجانب الخلفي للغسالة لتسهيل وصول خراطيم توريد الماء المرفقة إلى الغسالة.

تقوم معظم متاجر توريد المواسير ببيع خراطيم توريد الماء بمختلف أطوالها التي تصل إلى ١٠ أقدام (٣٠٥ سم).

يمكنك تقليل مخاطر تسرب الماء أو تعرّضه للتلوث عن طريق:

- تيسير وصول الخراطيم إلى صنابير الماء.
- إغلاق الصنابير في حالة عدم تشغيل الغسالة.
- الفحص الدوري للتأكد من عدم تسرب الماء من تجهيزات خراطيم توريد الماء.

⚠ تحذير
افحص جميع التوصيلات بصمام وصنابير الماء للتحقق من عدم وجود أي تسريب قبل استخدام الغسالة للمرة الأولى.

WF1802WPU2-03042Q_AR.indd Sec4:14 12/1/2011 9:32:43 PM

التصريف

توصي شركة Samsung باستخدام ماسورة رأسية بارتفاع ٦٥ سم ويجب تمرير خرطوم التصريف من خلال ماسك خرطوم التصريف حتى يصل إلى الماسورة الرأسية. ويجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لتسمح بإدخال القطر الخارجي لخرطوم التصريف الذي يقوم المصنّع بإرفاقه.

التثبيت الأرضي

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. وقد تحتاج الأسطح الخشبية إلى تقوية لتقليل الاهتزاز و/أو الأحمال غير المتوازنة. تكون طريقة بسط السجاد على الأرضيات بالإضافة إلى أسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية تحرك الغسالة بشكل طفيف أثناء دورة العصر.
لا تقم مطلقًا بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة الحرارة المحيطة

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء، حيث إن الغسالة تحتفظ دومًا ببعض الماء في صمام الماء والمضخة ومناطق من الخرطوم، حيث قد يتسبب الماء المتجمد الموجود في المواسير في إلحاق ضرر بالسيور والمضخة والمكونات الأخرى.

تركيب القنطرة أو الخزانة

لتشغيل الغسالة بشكل آمن وسليم، يجب توفير الحد الأدنى من الفراغات حولها كما يلي:

الجوانب ـــ ٢٥ مم　　الجانب الخلفي ـــ ٥١ مم

الجزء العلوي ـــ ٢٥ مم　　الواجهة ـــ ٤٦٥ مم

في حالة تركيب الغسالة والمجفف معًا، يجب أن يحتوي الجزء العلوي للقنطرة أو الخزانة على فتحة هواء غير مسدودة مساحتها ٤٦٥ مم على الأقل. لا تتطلب الغسالة وحدها فتحة هواء بعينها.

تركيب الغسالة

الخطوة رقم ١
اختيار مكان الغسالة

قبل تركيب الغسالة، تأكد من توفر ما يلي في المكان الذي قمت باختياره:

- سطح صلب ومستو دون وجود سجاد أو أرضية قد تعوق عملية التهوية
- مكان بعيد عن أشعة الشمس المباشرة
- تهوية كافية
- لا يصل إلى مرحلة التجمد (أقل من ٣٢ درجة فهرنهايت أو ٠ درجة مئوية)
- يكون بعيدًا عن مصادر الحرارة مثل البترول أو الغاز
- تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك التيار الكهربي

WF1802WPU2-03042Q_AR.indd Sec4:15　12/1/2011 9:32:43 PM

إعداد الغسالة

الخطوة رقم ٢

فك مسامير الشحن

قبل تركيب جهاز الغسالة، يجب فك مسامير الشحن الخمسة من اللوحة الخلفية للجهاز.

١. قم بفك جميع المسامير بواسطة مفتاح الصواميل المرفق مع الجهاز.

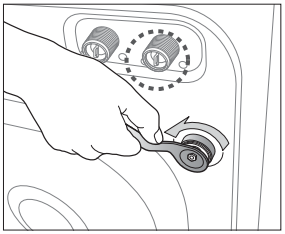

٢. امسك الصواميل بواسطة مفتاح الصواميل واسحبها من خلال الجزء العريض للفتحة. كرر ذلك مع كل مسمار.

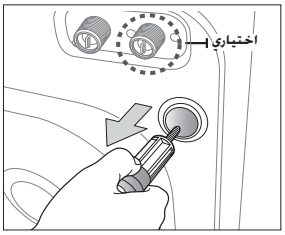

٣. قم بتغطية جميع الفتحات باستخدام الأغطية البلاستيكية المرفقة مع الجهاز.

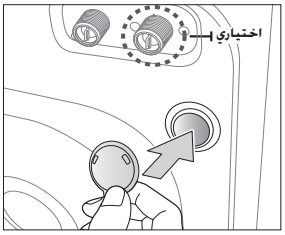

٤. قم بحفظ مسامير الشحن في مكان بعيد آمن. فقد تحتاج إلى نقل الغسالة إلى مكان آخر في المستقبل.

⚠ تحذير: قد تشكّل مواد التعبئة خطرًا على الأطفال؛ لذا، يرجى الاحتفاظ بجميع مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين، وغيرها من المواد) بعيدًا عن متناول أيدي الأطفال.

قم بإدخال مثبت الغطاء (أحد الملحقات الموجودة داخل عبوة الفينيل) في الفتحة التي قمت بإخراج سلك الكهرباء منها بالجانب الخلفي للمنتج (متوفر بطرازات محددة).

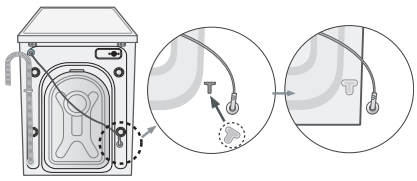

WF1802WPU2-03042Q_AR.indd Sec4:16 12/1/2011 9:32:43 PM

الخطوة رقم ٣

ضبط استواء أرجل الغسالة

عند تركيب الغسالة، تأكد من توصيل قابس التيار الكهربي وخرطوم التزوّد بالماء وخرطوم التصريف بسهولة.

١. ضع الغسالة في المكان المناسب.

٢. اجعل الغسالة مستوية عن طريق لف أقدام ضبط الاستواء إلى الداخل والخارج يدويًا كما هو مطلوب.

٣. عند استواء الغسالة، أحكم ربط الصواميل باستخدام مفتاح الربط المرفق مع الغسالة.

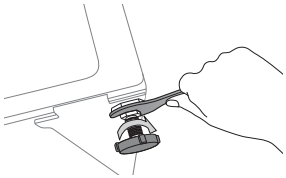

الخطوة رقم ٤

توصيل خرطوم التزود بالماء والتصريف

توصيل خرطوم التزود بالماء

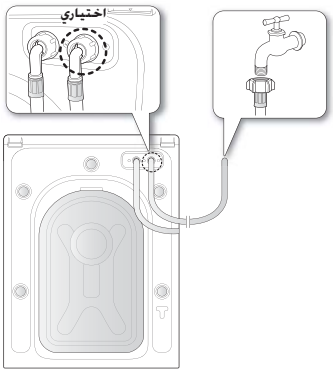

١. استخدم مثبت الذراع الذي على شكل حرف L الخاص بخرطوم توريد الماء البارد وقم بتوصله إلى مدخل توريد الماء البارد الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.

يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة والطرف الآخر للخرطوم بصنبور الماء، مع مراعاة عدم جعل الخرطوم مشدودًا. إذا كان الخرطوم قصيرًا جدًا، استبدل به خرطومًا أطول يتحمل الضغط العالي.

٢. قم بتوصيل الطرف الآخر لخرطوم توريد الماء البارد بصنبور الماء البارد وأحكم تثبيته يدويًا. يمكنك، إذا لزم الأمر، إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولفه وإعادة ربطه بإحكام.

بالنسبة للطُرز المحددة المزودة بمدخل إضافي للتزود بالماء الساخن:

١. استخدم مثبت الذراع الذي على شكل L الأحمر الخاص بخرطوم توريد الماء الساخن وقم بتوصيلة بمدخل توريد الماء الساخن الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.

٢. قم بتوصيل الطرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم تثبيته يدويًا.

٣. استخدم خرطوم على شكل Y إذا أردت استخدام الماء البارد فقط.

WF1802WPU2-03042Q_AR.indd Sec4:17 12/1/2011 9:32:43 PM

إعداد الغسالة

توصيل خرطوم توريد الماء (طرز محددة)

١. قم بفك المحوّل من خرطوم توريد الماء.

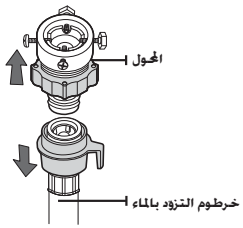

٢. أولاً، باستخدام مفك براغي من نوع "+"، قم بفك المسامير الأربعة الموجودة بالمحوّل. ثم أخرج المحوّل. وقم بلف الجزء رقم (٢) باتجاه السهم حتى تكون هناك مسافة مقدارها ٥ مم بينهما.



٣. صل المحول بصنبور الماء عن طريق ربط البراغي بإحكام أثناء رفع المحول لأعلى. واجعل الجزء (٢) باتجاه السهم وصل الطرف (١) بالطرف (٢).

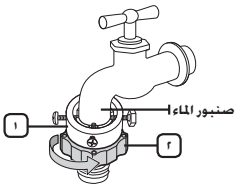

٤. وصّل خرطوم التزوّد بالماء بالمحوّل. عند إرخاء الجزء (٣)، يتصل الخرطوم بالمحول تلقائياً محدثاً صوت "نقرة".

بعد توصيل الخرطوم بالمحوّل، تأكد من توصيله بشكل صحيح عن طريق جذب الخرطوم لأسفل.

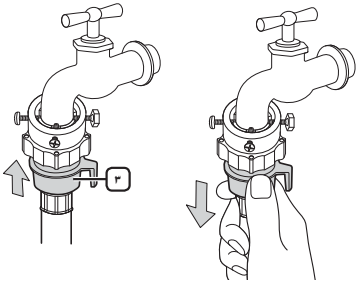

٥. قم بتوصيل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود بالجانب الخلفي من الغسالة. لف الخرطوم في اتجاه عقارب الساعة إلى النهاية.

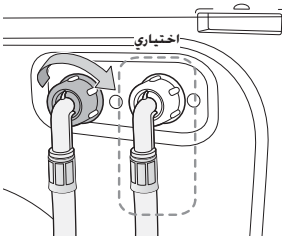

WF1802WPU2-03042Q_AR.indd Sec4:18 12/1/2011 9:32:44 PM

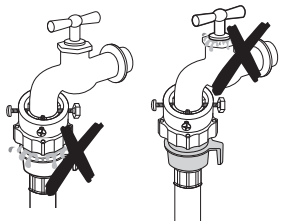

١. قم بتشغيل مصدر توريد الماء وتأكد من عدم وجود تسريبات من صمام الماء أو الصنبور أو المحوّل. قم بتكرار الخطوات السابقة في حالة تسريب الماء.

⚠ تحذير: لا تستخدم الغسالة في حالة تسريب الماء. فقد يتسبب ذلك في حدوث صدمة كهربية أو إصابة جسدية.

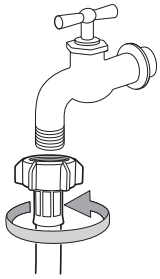

- إذا كان صنبور الماء من النوع القلاووظ، قم بتوصيل خرطوم توريد الماء إلى الصنبور كما هو موضح.

استخدم صنبورًا من النوع التقليدي جدًا لتوريد الماء. إذا كان الصنبور مربعًا أو كبيرًا جدًا، أزل الحلقة الفاصلة قبل إدخال الصنبور في المحوّل.

توصيل خرطوم المياه (طرازات محددة)

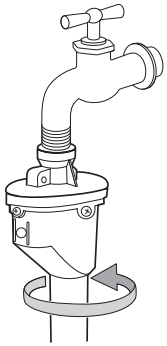

تم ابتكار خرطوم المياه لمنع التسرب على الإطلاق. حيث يتم توصيله بخرطوم توريد المياه، ومن ثم يعمل تلقائيًا على إيقاف تدفق الماء في حالة حدوث أي تلف بالخرطوم. كما يتم عرض مؤشر تحذير.

- صل خرطوم تزويد الماء بصنبور الماء كما هو موضح.

WF1802WPU2-03042Q_AR.indd Sec4:19 12/1/2011 9:32:45 PM

إعداد الغسالة

توصيل خرطوم التصريف

يمكنك وضع طرف خرطوم التصريف بثلاث طرق:

١. فوق حافة حوض الغسيل: يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و٩٠ سم. وللحفاظ على انثناء خرطوم التصريف، استخدم حامل الخرطوم البلاستيكي المرفق. ثبت الموجه على الجدار بواسطة خطاف أو في الصنبور بواسطة سلك أو حبل لمنع حركة خرطوم التصريف.

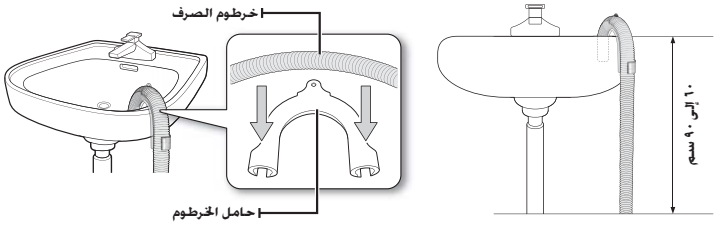

٢. في فرع أنبوب تصريف الحوض: يجب أن يكون فرع أنبوب التصريف فوق سباكة الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.

٣. في أنبوب تصريف: نوصي باستخدام أنبوب عمودي بارتفاع ٦٥ سم؛ على ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.

يتطلب خرطوم تصريف الماسورة الرأسية ما يلي:

- قطر يبلغ ٥ سم بحد أدنى.
- سعة جرف تبلغ ٦٠ لترًا في الدقيقة بحد أدنى.

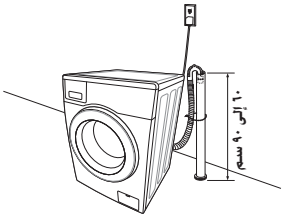

الخطوة رقم ٥

تشغيل الغسالة

قم بتوصيل سلك التيار الكهربي بمقبس حائط بمخرج تيار كهربي معتمد لتيار متردد بجهد كهربي من ٢٢٠ إلى ٢٤٠ فولت و٥٠ هرتز محمي بمنصهر أو قاطع دائرة كهربية. (المزيد من المعلومات حول متطلبات التوصيل الكهربائي والأرضي. راجع صفحة رقم ١٤.)

WF1802WPU2-03042Q_AR.indd Sec4:20 12/1/2011 9:32:45 PM

غسل الملابس

يتمثل أصعب أمر عند استخدام الغسالة الجديدة من Samsung في تحديد الأشياء التي يجب غسلها أولاً.

الغسل للمرة الأولى

قبل غسل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة (من دون ملابس).

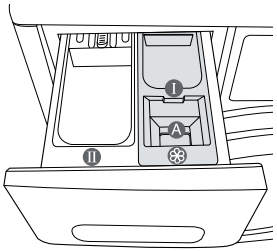

١. اضغط على زر **Power (الطاقة)**.
٢. أضف كمية قليلة من مسحوق الغسيل في الجزء المخصص له (II) في درج المسحوق.
٣. قم بتشغيل تزويد الماء المتصل بالغسالة.
٤. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

يؤدي ذلك إلى إزالة الماء المتبقي في الغسالة بعد التشغيل الاختباري الذي قامت به الشركة المصنّعه للغسالة.

الدرج (I): مسحوق للغسل الأولي أو نشا.
الدرج (II): مسحوق الغسيل لدورة الغسل الرئيسية ومواد تنقيه الماء ومواد ما قبل النقع ومادة التبييض ومواد إزالة البقع.
الدرج (❋): المواد الإضافية. مثل مكون أو منعم الأقمشة (املأ الدرج بحيث لا تتجاوز الحافة السلفية (الحد الأقصى) العلامة "A")

إرشادات أساسية

١. ضع الملابس في الغسالة.

تنبيه: لا تتجاوز الوزن المحدد للغسالة. لتحديد سعة الوزن لنوع الملابس التي ترغب في غسلها، راجع الجدول الموجود في صفحة رقم ٢٩.

- تأكد من أن الملابس غير عالقة بالباب، حيث قد يؤدي ذلك إلى تسرب الماء.
- قد يتبقى مسحوق الغسيل في الجزء المطاطي الأمامي للغسالة بعد دورة الغسيل. قم بإزالة أي مسحوق متبقي، لأن ذلك قد يتسبب في تسرب الماء.
- لا تقم بغسل العناصر العازلة للماء.

٢. أغلق الباب حتى يثبت.
٣. قم بتشغيل الغسالة.
٤. أضف المسحوق والمواد الإضافية إلى درج التوزيع.
٥. حدد الدورة والخيارات المناسبة لكمية الملابس التي تمت إضافتها.
سيضيء مؤشر الغسل وسيظهر وقت الدورة المحدد على لوحة العرض.
٦. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

WF1802WPU2-03042Q_AR.indd Sec5:21 12/1/2011 9:32:46 PM

غسل الملابس

استخدام لوحة التحكم

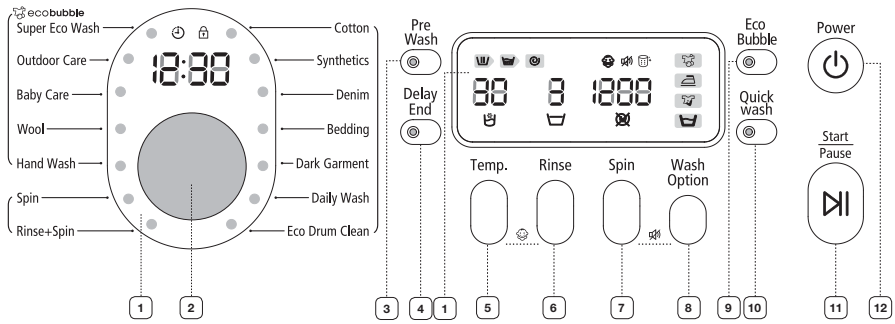

١ **لوحة العرض الرسومية الرقمية**	تعرض الوقت المتبقي لدورة الغسل وكافة المعلومات الخاصة بالدورة ورسائل الخطأ.
٢ **قرص تحديد الدورة**	تحديد نوع التدوير وسرعة التنشيف للدورة. لمزيد من المعلومات، راجع "غسل الملابس باستخدام قرص اختيار الدورة". (صفحة ٢٧). **Cotton (قطن)** - للملابس القطنية خفيفة أو متوسطة الاتساخ وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان، إلخ. **Synthetics (ألياف صناعية)** - لغسل البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى. **Denim (الجينز)** - يضمن وجود مستوى ماء أعلى في دورة الغسيل الأساسية والشطف الإضافي عدم وجود أي بقايا من مسحوق الغسيل في الملابس. **Bedding (مفروشات)** - لغطاء السرير وملاءات السرير وأغطية اللحاف، وما إلى ذلك. غسل ما يقل عن ٢ كجم ونوع واحد فقط من المفروشات لتحقيق أفضل النتائج. **Dark Garment (ملابس داكنة)** - تضمن دورات الشطف الإضافية والتنشيف منخفض السرعة غسل ملابسك الداكنة المفضلة بلطف وشطفها جيدًا. **Daily Wash (غسل يومي)** - للملابس التي تستخدم يوميًا مثل الملابس الداخلية والقمصان. **Eco Drum Clean (تنظيف الحاوية صديق البيئة)** - لتنظيف الحاوية. لتنظيف الحاوية من الأتربة والبكتيريا. ويُوصى تشغيله بانتظام (بعد كل ٤٠ دورة غسيل). دون منظّف أو مبيّض. **Super Eco Wash (غسل متميز صديق البيئة)** - تقوم الدورة Eco Bubble (الفقاعات صديقة البيئة) ذات درجة الحرارة المنخفضة بضمان تحقيق أفضل نتائج للغسيل بينما تقوم بتوفير الطاقة بشكل فعّال. **Outdoor Care (العناية بملابس الخروج)** - للغسيل الخارجي مثل الملابس التسلق وملابس التزحلق والملابس الرياضية. إلى جانب توفر لمسات المعالجة الفعّالة للمنسوجات والألياف مثل الألياف اللدنة والقماش القابل للتمدد والألياف الدقيقة. **Baby Care (ملابس الأطفال)** - تضمن درجات حرارة الغسل العالية ودورات الشطف الإضافية عدم وجود بقايا لمسحوق الغسيل في الملابس رفيعة السمك. **Wool (صوف)** - تستخدم هذه الدورة لغسل الملابس الصوفية التي يُسمح بوضعها في الغسالة فقط. يجب أن تقل الحمولة عن ٢ كجم. • تتم دورة غسيل الصوف باستخدام عملية الاهتزاز الخفيف. وأثناء عملية الغسيل، تستمر عمليتا الاهتزاز الخفيف والنقع لحماية الألياف الصوفية من الانكماش / التلف وللحصول على نظافة فائقة بسهولة. ولا تعد عملية التوقف هذه مشكلة. • يُنصح باستخدام مسحوق تنظيف عادي لدورة Wool (الصوف)، وذلك للحصول على نتائج غسل رائعة ولعناية فائقة بالألياف الصوفية.

WF1802WPU2-03042Q_AR.indd Sec5:22 12/1/2011 9:32:47 PM

	تم اعتماد دورة غسيل الملابس الصوفية في هذه الغسالة من قبل Woolmark لغسيل منتجات Woolmark التي يمكن وضعها في الغسالة. شريطة أن يتم غسيل المنتجات وفقًا للتعليمات الموجودة على الملصق الموجود على الملابس والتعليمات الصادرة من الشركة المصنعة لهذه الغسالة. مثل M0814 من السلسلة *****WF18و M0815 السلسلة *****WF17. (رقم الشهادة الصادرة عن شركة IWS NOM INEE المحدودة) **Handwash (غسل يدوي)** - دورة غسل بسيطة كما لو كنت تغسل الملابس باليدين. **Spin (تنشيف)** - إجراء دورة عصر إضافية لإزالة المزيد من الماء. **Spin + Rinse (شطف + تنشيف)** - للملابس التي تحتاج إلى الشطف فقط أو لإضافة منعم الأقمشة الذي تتم إضافته أثناء الشطف.
٣ زر تحديد PREWASH (غسل أولي)	اضغط على هذا الزر لتحديد Pre-wash "غسل أولي". علمًا بأن هذه الوظيفة متاحة مع دورات Cotton (قطن) وSynthetics (ألياف صناعية) وDenim (الجينز) وBedding (مفروشات) و Dark Garment (ملابس داكنة) وDaily Wash (غسل يومي) وBaby Care (العناية بملابس الأطفال).
٤ زر تحديد DELAY END (تأجيل التوقف)	اضغط على هذا الزر بشكل متكرر للاختيار من بين خيارات Delay End (تأجيل التوقف) المتوفرة (من ٣ ساعات حتى ١٩ ساعة بإمكانية زيادة ساعة) علمًا بأن الساعة المعروضة على الشاشة تشير إلى وقت انتهاء دورة الغسيل.
٥ زر تحديد TEMPERATURE (درجة الحرارة)	اضغط على هذا الزر بشكل متكرر للتبديل بين خيارات درجة حرارة الماء المتاحة: (ماء بارد و٣٠ و٤٠ و٦٠ و٩٥ درجة مئوية).
٦ زر التحديد RINSE (شطف)	اضغط على هذا الزر لإضافة دورات شطف إضافية. علمًا بأن الحد الأقصى لعدد دورات الشطف خمس دورات.
٧ زر التحديد SPIN (تنشيف)	اضغط على هذا الزر بشكل متكرر للتبديل بين سرعات دورة العصر المتاحة. WF1804/WF1704: و400 و1200 و800 و1400 لفة في الدقيقة WF1802/WF1702: و400 و800 و1000 و1200 لفة في الدقيقة "No spin (بدون تنشيف)" - تبقى الملابس في الحاوية دون تشغيل دورة العصر بعد تصريف الماء النهائي. "Rinse Hold (انتظار الشطف)" - يبقى الغسيل منقوعًا في ماء الشطف النهائي. يجب تشغيل دورة Drain (تصريف) أو Spin (تنشيف) قبل إخراج الملابس.
٨ زر التحديد WASH OPTION (خيار الغسل)	اضغط الزر بشكل متكرر للاختيار من بين خيارات : Soak (نقع) ← Intensive (مكثف) ← Easy Iron (كي سهل) ← Soak (النقع) + Intensive (مكثف) ← Soak (نقع) + Easy Iron (كي سهل) ← Intensive (مكثف) + Easy Iron (كي سهل) ← Soak (نقع) + Intensive (مكثف) + Easy Iron (كي سهل) ← إيقاف التشغيل "Intensive (مكثف)": اضغط هذا الزر مع الملابس المتسخة بشدة والتي تحتاج إلى الغسل بكثافة. تتم زيادة مدة الدورة لكل الدورات."Soak (نقع)": استخدم هذا الخيار لإزالة البقع من الغسيل بفاعلية عن طريق نقعه. • يتم إجراء وظيفة النقع لمدة ١٣ دقيقة في دورة الغسل. • تستمر وظيفة النقع لمدة ٣٠ دقيقة من خلال ست دورات. حيث تستمر كل دورة نقع لمدة دقيقة واحدة ثم تقف لمدة ٤ دقائق. • تتاح وظيفة النقع مع برامج الغسل التالية فقط: Cotton (قطن) و Synthetics (ألياف صناعية) و Denim (الجينز) و Bedding (مفروشات) و Baby Care (العناية بملابس الأطفال) و Daily Wash (غسل يومي). "Easy Iron (كي السهل)": استخدم هذا الخيار لتحضير الغسيل حتى يمكن كيه بسهولة.

WF1802WPU2-03042Q_AR.indd Sec5:23 12/1/2011 9:32:47 PM

غسل الملابس

٩ زر تحديد Eco Bubble (الفقاعات صديقة البيئة)	يتم تشغيل تحديد Eco Bubble (الفقاعات صديقة البيئة) بشكل افتراضي. اضغط على زر الخيار Eco Bubble (الفقاعات صديقة البيئة) مرة واحدة لإلغاء التحديد و Bubble Generator OFF (إيقاف تشغيل مولّد الفقاعات) (الموضح باللوحة). ثم اضغط عليه مرة أخرى لتعيين الوظيفة إلى ON (تشغيل). • بعض دورات الغسيل يكون بها الخيار Eco Bubble (الفقاعات صديقة البيئة) معيناً إلى ON (تشغيل) (سيتم توضيح ذلك باللوحة. ويتم تشغيل "المولّد" تلقائيًا). • لا تحتاج دورات الغسل الأخرى لهذا الخيار وتقوم "بإيقاف تشغيل المولّد" تلقائيًا. • يمكنك ضبط هذا الخيار يدويًا عند استخدام عدد من الدورات. مما يؤثر على وقت الغسل بشكل واضح على اللوحة لتحقيق النتائج المطلوبة (يُرجى مراجعة الصفحة ٢٦ لمزيد من المعلومات).
١٠ زر التحديد QUICK WASH (غسل سريع)	لغسل الملابس خفيفة الاتساخ والغسيل الأقل من ٢ كجم التي تحتاجها بسرعة. يستغرق هذا البرنامج حوالي ١٥ دقيقة كحد أدنى. ولكن قد يختلف من القيم الموضحة حسب ضغط المياه وعسر المياه ودرجة حرارة التزويد بالمياه ودرجة حرارة الغرفة ونوع الغسيل وكميته ودرجة الاتساخ والمسحوق المستخدم للملابس الغير متزنة وحدوث انقطاع التيار الكهربائي والخيارات الإضافية المحددة. • اضغط على هذا الزر بشكل متكرر لاختيار مدة الدورة: ١٥ دقيقة ← ٢٠ دقيقة ← ٣٠ دقيقة ← ٤٠ دقيقة ← ٥٠ دقيقة ← ٦٠ دقيقة ← ٧٠ دقيقة ← ٨٠ دقيقة ← ٩٠ دقيقة ← إيقاف التشغيل ⚠ تنبيه: يجب أن تكون كمية المنظف سواء كان مسحوقًا أو سائلاً أقل من ٢٠ جرامًا (للملابس التي تزن ٢ كجم) وإلا قد يتبقى المنظف بالملابس.
١١ زر تحديد START/PAUSE (تشغيل/إيقاف مؤقت)	اضغط لإيقاف الدورة مؤقتاً وإعادة تشغيلها.
١٢ زر POWER (الطاقة)	اضغط هذا الزر مرة لتشغيل الغسالة. واضغط عليه مرة أخرى لإيقاف تشغيلها. في حالة عدم الضغط على أي من أزرار الغسالة لمدة تزيد عن ١٠ دقائق أثناء تشغيلها. يتم إيقاف تشغيلها تلقائيًا.

WF1802WPU2-03042Q_AR.indd Sec5:24 12/1/2011 9:32:48 PM

Child Lock (التأمين ضد عبث الأطفال)

تمكّنك وظيفة Child Lock (التأمين ضد عبث الأطفال) من قفل الأزرار حتى لا يكون هناك إمكانية لتغيير دورة الغسل التي قمت باختيارها.

التنشيط /إلغاء التنشيط

إذا كنت ترغب في تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال) أو عدم تشغيلها، اضغط على الزرين **Temp (درجة الحرارة)** و**Rinse (شطف)** في وقت واحد لمدة ٣ ثوان. "يضيء مؤشر "Child Lock (التأمين ضد عبث الأطفال) " عند تشغيل هذه الميزة.

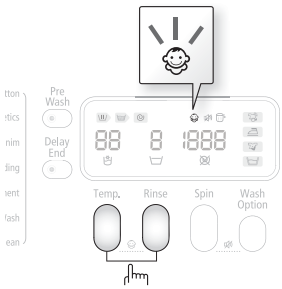

3 ثوانٍ

يمكن استخدام زر **Power (الطاقة)** فقط عند تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال). يستمر تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال) حتى بعد تشغيل الغسالة وإيقاف تشغيلها أو بعد فصل توصيل سلك التيار الكهربائي وإعادة توصيله.

Sound off (إيقاف تشغيل الصوت)

يمكن تحديد وظيفة Sound Off (إيقاف تشغيل الصوت) مع كافة الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لجميع الدورات. حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر، لا يتغير الإعداد الذي تم اختياره.

التنشيط /إلغاء التنشيط

إذا كنت تريد تشغيل وظيفة Sound Off (إيقاف تشغيل الصوت)، اضغط الزرين **Spin (تنشيف)** و **Option (خيارات)** في نفس الوقت لمدة ٣ ثوان. ستضيء العلامة "Sound Off (إيقاف تشغيل الصوت) " عند تنشيط هذه الميزة.

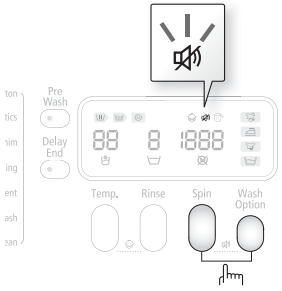

3 ثوانٍ

Delay End (تأجيل التوقف)

يمكنك ضبط الغسالة لإجراء عملية الغسل تلقائيًا في وقت لاحق عن طريق اختيار تأجيل الوقت من ٣ ساعات حتى ١٩ ساعة.(بزيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.

١. يمكنك ضبط الغسالة تلقائيًا أو يدويًا حسب نوع الملابس التي تريد غسلها.
٢. اضغط على الزر **Delay End (تأجيل التوقف)** بشكل متكرر حتى يتم تعيين وقت التأجيل المطلوب.
٣. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**. يضيء مؤشر "Delay End (تأجيل التوقف) ". وتبدأ الساعة بالعد التنازلي حتى تبلغ الوقت المحدد.
٤. لإلغاء وظيفة Delay End (تأجيل التوقف)، اضغط على الزر **Power (الطاقة)** ثم قم بتشغيل الغسالة من جديد.

WF1802WPU2-03042Q_AR.indd Sec5:25 12/1/2011 9:32:48 PM

غسل الملابس

Eco Bubble (الفقاعات صديقة البيئة)

تسمح ميزة Eco Bubble (الفقاعات صديقة البيئة) بتوزيع المسحوق بالتساوي وتخلله داخل الأنسجة بشكلٍ أسرع وأعمق.

تتوفر وظيفة الفقاعات بكافة الدورات ماعدا دورة Eco Drum Clean (تنظيف الحاوية صديق البيئة) ومعدل التشغيل المتاح للوظيفة كما يلي:

الدورة	وظيفة الفقاعات	إلغاء وظيفة الفقاعات
Cotton (قطن) و Synthetics (ألياف صناعية) و Denim (الجينز) و Bedding (مفروشات) و Dark Garment (ملابس داكنة) و Daily Wash (غسل يومي)	متوفرة	متوفرة
Super Eco Wash (غسل متميز صديق البيئة) و Outdoor Care (العناية بملابس الخروج) و Baby Care (العناية بملابس الأطفال) و Wool (صوف) و Hand Wash (غسل يدوي)		غير متوفرة
Eco Drum Clean (تنظيف الحاوية صديق البيئة)	غير متوفرة	-

- قد يتم تطبيق وظيفة فقاعات مختلفة حسب الدورة.

يعتبر خيار Eco Bubble (الفقاعات صديقة البيئة) هو الخيار الافتراضي. اضغط عليها مرة واحدة لإلغاء تحديد خيار الفقاعات، ثم اضغط مرة أخرى لتحديد خيار الفقاعات.

١. افتح الباب. ضع الغسيل بداخل حوض الغسل ثم أغلق الباب.
٢. اضغط على زر **Power (الطاقة)**.
٣. حدد وظيفة.
٤. ضع كمية مناسبة من المسحوق ومنعم الأقمشة بداخل الحجيرة المناسبة وفقًا لكمية الملابس ثم قم بإغلاق الدرج.

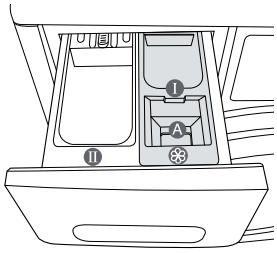

- أضف كمية مناسبة من المسحوق بداخل حجيرة المسحوق (II)، ثم أضف منعم الأقمشة بحجيرة المنعم (❀) الموجودة بأسفل الخط الرئيسي لمنعم الأقمشة مباشرةً. (الحد أقصى لـ "A")
- عند تحديد الدورة Prewash (غسل أولي)، قم بإضافة المسحوق بداخل حجيرة الغسل الأولي (I).
- لاستخدام المنظف السائل، اترك درج المنظف السائل بالقاعدة (راجع قسم"المنظف السائل" بصفحة ٣٠).

لا تضف مسحوق تنظيف بدرج المنظّف السائل.

٥. اضغط الزر Start/Pause (تشغيل/إيقاف مؤقت).
- اضغط الزر Start/Pause (تشغيل/إيقاف مؤقت) لبدء عملية الغسل.
- يتم التعرف على كمية الغسيل تلقائيًا ويتم غسل الملابس.
- حالما يتم بدء عملية تشغيل الغسالة، لا يمكنك إضافة وظيفة الفقاعات أو تحديدها.

- تتولد كمية كبيرة من الفقاعات وفقًا للكمية المحددة من مسحوق التنظيف.
- الرجاء تنظيف مصفاة "المخلفات" باستمرار، علمًا بأن التنظيف الدوري يساعد في توليد الفقاعات بكفاءة.
- قد يتم امتصاص الفقاعات وتبدو ككمية صغيرة وفقًا للمسحوق والملابس.
- بالرغم من أنه يتم توليد الفقاعات بمجرد بدء عملية الغسيل، فقد تستغرق دقائق عديدة للمستخدمين كي يتم مشاهدتها.

WF1802WPU2-03042Q_AR.indd Sec5:26 12/1/2011 9:32:50 PM

غسل الملابس باستخدام قرص اختيار الدورة

تتيح الغسالة الجديدة غسل الملابس بسهولة. باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار أحد برامج الغسل، تقوم الغسالة بضبط درجة الحرارة ووقت الغسل وسرعات الغسل المناسبة.

١. افتح صنبور الماء.
٢. اضغط على زر **Power (الطاقة)**.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل ومنعّم الأقمشة ومسحوق للغسل الأولي (إذا لزم الأمر) في الحجيرات المناسبة.

تتوفر ميزة Pre-wash (غسل أولي) عند تحديد الدورات: Cotton (قطن) و Synthetics (ألياف صناعية) و Denim (الجينز) و Bedding (مفروشات) و Dark Garment (ملابس داكنة) و Daily Wash (غسل يومي) و Baby Care (العناية بملابس الأطفال). ويعد الغسل الأولي ضروريًا فقط في حالة الاتساخ الشديد للملابس.

٧. استخدم **Cycle Selector (قرص تحديد الدورة)** لتحديد الدورة المناسبة وفقًا لنوع النسيج: Cotton (قطن) و Synthetics (ألياف صناعية) و Denim (الجينز) و Bedding (المفروشات) و Dark Garment (ملابس داكنة) وDaily Wash (غسل يومي) و Eco Drum Clean (تنظيف الحاوية صديق البيئة) و Super Eco Wash (غسل متميز صديق البيئة) و Outdoor Care (العناية بملابس الخروج) و Baby Care (العناية بملابس الأطفال) و Wool (صوف) و Hand Wash (غسل يدوي). سيتم إضاءة المؤشرات المرتبطة على لوحة التحكم.
٨. في هذا الوقت، يمكنك التحكم في درجة حرارة الغسل وحجم الشطف وسرعة التنشيف ووقت التأجيل بالضغط على زر الخيار المناسب.
٩. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)** وعندها تبدأ الغسالة في العمل. يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على لوحة العرض.

الخيار Pause (إيقاف مؤقت)

من الممكن إضافة/إزالة قطع الملابس في غضون ٥ دقائق من بدء الغسل.

١. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)** لإلغاء قفل الباب.

لا يمكن فتح الباب عندما تكون درجة حرارة الماء "عالية جدًا" أو مستوى الماء "عالي جدًا".

٢. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)** لإعادة تشغيل الغسالة.

عند انتهاء الدورة:

بعد اكتمال الدورة، سيظهر "End" على شاشة العرض لمدة ٥ دقائق، ثم سيتم إيقاف التشغيل تلقائيًا.

١. افتح الباب.
٢. أخرج الملابس.

WF1802WPU2-03042Q_AR.indd Sec5:27 12/1/2011 9:32:51 PM

غسل الملابس

غسل الملابس يدويًا

يمكنك غسل الملابس يدويًا دون استخدام Cycle Selector (قرص تحديد الدورة).

١. افتح مصدر توريد الماء.
٢. اضغط على زر **Power (الطاقة)** الموجود بالغسالة.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل. وإذا لزم الأمر، أضف منعّم الأقمشة أو مسحوق للغسل الأولي في الحجيرات المناسبة.
٧. اضغط على الزر **Temp (درجة الحرارة)** لتحديد درجة الحرارة المطلوبة. (ماء بارد أو ٣٠ أو ٤٠ أو ٦٠ أو ٩٥ درجة مئوية)
٨. اضغط على الزر **Rinse (شطف)** لتحديد عدد دورات الشطف المطلوبة.

علمًا بأن الحد الأقصى لعدد دورات الشطف خمس دورات.

وتزداد مدة الغسل وفقًا لعدد الدورات.

٩. اضغط على الزر **Spin (تنشيف)** لتحديد سرعة العصر.

تتيح لك وظيفة انتظار الشطف إخراج الملابس التي لا تزال مبتلة من الغسالة.

(: No Spin (بدون تنشيف)، : Rinse Hold (انتظار الشطف))

١٠. اضغط الزر **Delay End (تأجيل التوقف)** بشكل متكرر للتنقل بين خيارات Delay End (تأجيل التوقف) المتوفرة (من ٣ ساعات إلى ١٩ ساعة بواقع زيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.
١١. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)** وعندها ستبدأ دورة الغسالة.

دليل غسيل الملابس

اتّبع هذه التعليمات البسيطة للحصول على ملابس ذات نظافة فائقة وغسيل مثالي.

تحقق دومًا من ملصق العناية الموجود بالملابس قبل غسلها.

قم بفرز الملابس وغسلها وفقًا للمعايير التالية:

- بطاقة العناية: افرز الملابس إلى أقطان وألياف مخلوطة وأقمشة صناعية وملابس حريرية وأصواف ورايون.
- اللون: افصل الملابس البيضاء عن الملابس الملوّنة، واغسل الملابس الملونة الجديدة على حدة.
- الحجم: يعمل وضع الملابس بمختلف أحجامها في غسلة واحدة على تحسين عملية الغسل.
- رقة الملمس: اغسل الملابس الحساسة وحدها باستخدام الدورة Delicate (ملابس رقيقة) للملابس الصوفية والستائر والملابس الحريرية النقية والجديدة. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

إفراغ الجيوب

قم بإفراغ كافة جيوب الملابس قبل كل عملية غسل. إذ قد تتسبب الأشياء الصغيرة والصلبة ذات الأشكال غير المنتظمة، مثل العملات المعدنية والشفرات والدبابيس وماسكات الورق، في تلف الغسالة. لا تقم بغسل الملابس المزوّدة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

قد تتسبب المعادن المستخدمة في الملابس في تلفها وتلف الحوض. اقلب الملابس التي بها أزرار أو الملابس المطرّزة قبل غسلها. وإذا تركت سحابات السراويل والسترات مفتوحة أثناء الغسل، فقد تتسبب في تلف سلة التنشيف. يجب إغلاق السحابات وتثبيتها بخيط قبل الغسل.

قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسل.

الغسل الأولي للملابس القطنية

تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة أفضل نتائج لعمليات الغسل، ومن ثم فهي موفرة للطاقة والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ، استخدم prewash (غسل أولي) مع مسحوق الغسيل الذي يستند إلى البروتين.

WF1802WPU2-03042Q_AR.indd Sec5:28 12/1/2011 9:32:51 PM

تحديد السعة المناسبة

لا تتجاوز الوزن المحدد للغسالة حيث يؤدي ذلك إلى الحصول على نتائج غير مرضية. استخدم الجدول التالي لتحديد سعة التحميل لنوع الملابس التي تقوم بغسلها.

نوع القماش	السعة المناسبة	
الطراز	WF1804 / WF1802	WF1704 / WF1702
Cotton (قطن) - متوسط/خفيف الاتساخ - شديد الاتساخ	٨ كجم	٧ كجم
Synthetics (ألياف صناعية)	٣ كجم	٣ كجم
Denim (الجينز)	٣ كجم	٣ كجم
Bedding (مفروشات)	٢ كجم	٢ كجم
Outdoor Care (العناية بملابس الخروج)	٢ كجم	٢ كجم
Wool (صوف)	٢ كجم	٢ كجم

- في حالة عدم توازن الملابس (يضيء "UE" على الشاشة)، وفي هذه الحالة، أعد توزيع الملابس. حيث يؤدي عدم توازن الملابس إلى تقليل فعالية التنشيف.
- عند غسل المفروشات أو الألحفة، قد تطول مدة الغسل أو تقل فاعلية العصر.
- بالنسبة للمفارش أو الألحفة، يُوصى أن يكون الوزن ٢ (كجم) أو أقل.

تأكد من إدخال حمالات الصدر (التي يمكن غسلها في الماء) في شبكة غسيل (يتم شراؤها بشكل منفصل).

- قد تنكسر الأجزاء المعدنية الموجودة في حملات الصدر مما يؤدي إلى تلف الغسيل. لذا يجب عليك أن تتأكد من وضعهم داخل شبكة غسيل جيدة.
- قد تتعلق الملابس الصغيرة والخفيفة بالباب مثل الجوارب والقفازات والمنسوجات والمناديل. لذا يرجى وضعها داخل شبكة غسيل ناعمة.

تنبيه: لا تقم بغسل شبكة الغسيل وحدها دون وجود ملابس بها. فقد يؤدي ذلك إلى حدوث اهتزازات غير طبيعية في الغسالة مما قد يتسبب في حدوث إصابات.

معلومات حول مسحوق الغسيل والمواد الإضافية

مسحوق الغسيل الذي يمكن استخدامه

يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الملابس الناعمة أو Hand Wash For Wool (غسل يدوي للملابس الصوفية))، والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دومًا مسحوق الغسيل ذي "الرغوة القليلة" مصمم خصيصًا للغسالات الأوتوماتيكية.

اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقًا لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. وإذا لم تكن تعرف ما إذا كان الماء نقيًا أم لا في منطقتك، اتصل بالهيئة المسئولة عن الماء.

لا تستخدم منظفًا صلبًا أو خشنًا لأنه قد يتبقى في دورة الشطف. قد يتسبب في أداء الغسالة لدورة الشطف بشكل غير صحيح أو يتسبب في إعاقة تدفق الماء.

الرجاء ملاحظة التعليمات التالية عند استخدام الدورة Wool (صوف):

- استخدم مسحوقًا سائلاً متعادلاً لغسيل الصوف فقط.
- فعند استخدامك مسحوقًا بودرة، فقد يترك أثرًا على الغسيل ويتسبب في تلف الصوف.

WF1802WPU2-03042Q_AR.indd Sec5:29 12/1/2011 9:32:51 PM

غسل الملابس

درج مسحوق الغسيل

تحتوى الغسالة على حجيرات منفصلة لتوزيع المسحوق ومنعّم الأقمشة. قم بإضافة كافة المواد الإضافية الخاصة بتنظيف الملابس إلى الحجيرات المناسبة قبل بدء تشغيل الغسالة.

لا تقم بفتح درج المسحوق أثناء تشغيل الغسالة.

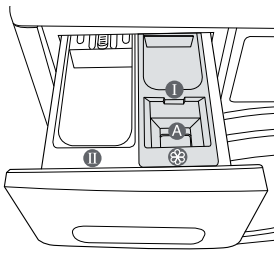

١. اسحب درج مسحوق الغسيل الموجود على الجانب الأيسر من لوحة التحكم.
٢. قم بإضافة الكمية الموصى بها من مسحوق الغسيل مباشرة في حجيرة المسحوق ⓘⓘ قبل تشغيل الغسالة.
٣. قم بإضافة الكمية الموصى بها من منعّم الأقمشة في الحجيرة الخاصة بها ❀ إذا لزم الأمر.

تنبيه

لا تقم بإضافة أي **منظف** مسحوق/سائل إلى حجيرة المنعّم (❀).

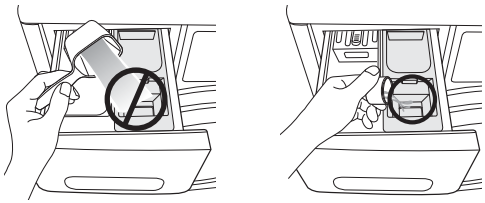

٤. عند استخدام الخيار Prewash (غسل أولي)، قم بإضافة الكمية الموصى بها من مسحوق الغسيل في حجيرة الغسل الأولي ⓘ.

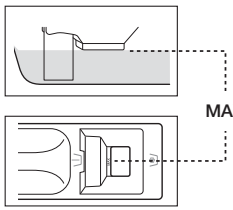

لا تستخدم أنواع المساحيق التالية عند غسل الملابس كبيرة الحجم.

- مساحيق الغسيل التي تكون على شكل ألواح أو أقراص
- المساحيق التي تكون على شكل كرة أو شبكة

يجب إذابة منعّم الأقمشة المركز أو السميك بقليل من الماء قبل صبه في درج التوزيع (لمنع إعاقة تدفق الماء).

تجنب عدم تدفق منعّم الأقمشة عند غلق درج المنظف بعد إضافة منعّم الأقمشة بداخل حجيرة مسحوق الشطف.

المنظف السائل (متوفر بطرازات محددة)

لاستخدام منظف سائل. قم بوضع درج المنظف السائل بداخل القسم الرئيسي للغسيل الخاص بقاعدة المنظف ثم قم بصب المنظف السائل بالدرج الخاص به.

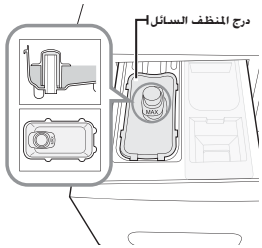

- لا تجاوز الملء عن الخط MAX (الحد الأقصى).
- في حالة استخدام مسحوق تنظيف، قم بإزالة درج المنظف السائل من قاعدة المنظف. لن يتم توزيع مسحوق التنظيف بواسطة درج المنظف السائل.
- قد يتبقى كمية من المنظف السائل بدرج المنظف بعد الانتهاء من الغسل.

WF1802WPU2-03042Q_AR.indd Sec5:30 12/1/2011 9:32:51 PM

تنظيف الغسالة وصيانتها

يؤدي حفظ الغسالة نظيفة على تحسين أدائها، وتجنب الإصلاحات غير الضرورية، وزيادة عمر الغسالة.

تنظيف الحاوية صديق البيئة

تعد هذه الدورة دورة تنظيف ذاتي يتم من خلالها إزالة الأتربة التي قد تعلق بالغسالة من الداخل.

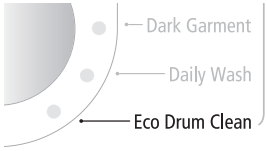

١. اضغط على زر **Power (الطاقة)**.
٢. قم بتدوير "قرص تحديد الدورة" إلى Eco Drum Clean (تنظيف الحاوية صديق البيئة).
   - يمكنك فقط استخدام الوظيفة Delay End (تأجيل التوقف).
   - يتم ضبط درجة حرارة المياه أثناء Eco Drum Clean (تنظيف الحاوية صديق البيئة) إلى ٧٠ درجة مئوية.

لا يمكنك تغيير درجة الحرارة.

- عند وضع الملابس بالغسالة، تتم عملية ضبط الحرارة تلقائيًا للقطن على ٣٠ درجة مئوية على برنامج ذي مستوى متوسط للمياه.

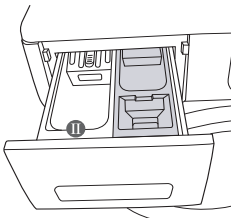

٣. ضع الكمية المناسبة من المنظف في حجيرة المسحوق (II) وأغلق درج المسحوق (عند تنظيف الحاوية باستخدام سائل منظف).
   - تأكد من استخدام المنظف الموصى به لتنظيف الحاوية.
   - يوجد نوعان من المنظفات: المسحوق والسائل. يتوفر المنظف السائل المستخدم فقط بدرج المنظف السائل (اختياري).

٤. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.
   - تبدأ دورة Eco Drum Clean (تنظيف الحاوية صديقة البيئة) عند الضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

تنبيه

- يمكنك تنظيف الحاوية بدون استخدام منظف بواسطة الدورة Eco Drum Clean (تنظيف الحاوية صديق البيئة).
- لا تستخدم الدورة Eco Drum Clean (تنظيف الحاوية صديق البيئة) أبدًا عند وجود ملابس داخل الغسالة. قد يتسبب ذلك في تلف النسيج أو حدوث مشكلة في الغسالة.
- **احذر استخدام المسحوق العادي بدورة Eco Drum Clean (تنظيف الحاوية صديق البيئة).**
- **استخدم ١٠/١ فقط من كمية منظف الحاوية الموصى به من قبل الشركة المصنعة للمنظف.**
- تأكد من استخدام الأكسجين المبيض فقط، حيث إن استخدام الكلور المبيض قد يؤدي إلى تغيير اللون أو إزالته.
- المنظف المسحوق: استخدم [المنظف المبيض المسحوق] أو [المنظف المستخدم لتنظيف الحاوية فقط].
- المنظف السائل: استخدم [الأكسجين المبيض السائل] أو [المنظف المستخدم لتنظيف الحاوية فقط].

وظيفة التنبيه الآلي لتنظيف الحاوية صديق البيئة

- إذا كان المؤشر "ECO Drum Clean (تنظيف الحاوية صديق البيئة)" على لوحة العرض مضاءً بعد عملية الغسل، يشير ذلك إلى ضرورة تنظيف الحوض (الحاوية). في هذه الحالة، قم بإخراج الغسيل من الغسالة، ثم قم بتشغيلها، وتنظيف الحاوية باستخدام ECO Drum Clean (تنظيف الحاوية صديق البيئة).
- إذا لم تقم بعملية ECO Drum Clean (تنظيف الحاوية صديق البيئة)، سيتم إيقاف تشغيل مؤشر "ECO Drum Clean" في لوحة العرض. وبالرغم من ذلك، يتم تشغيل مؤشر "ECO Drum Clean (تنظيف الحاوية صديق البيئة)" على اللوحة والمصباح الموجود على Cycle Selector (قرص تحديد الدورة) مرة أخرى بعد دورتين من الغسيل. ومع ذلك، لا يؤدي الأمر إلى حدوث مشكلة في الغسالة.

WF1802WPU2-03042Q_AR.indd Sec6:31 12/1/2011 9:32:52 PM

تنظيف الغسالة وصيانتها

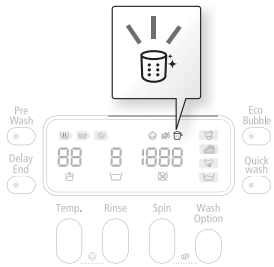

- وعمومًا، فإن وظيفة "التنبيه الآلي لتنظيف الحاوية صديق البيئة" تظهر مرة في الشهر تقريبًا، قد يختلف تكرار التنبيه وفقًا لعدد مرات استخدام الغسالة.
- **لمزيد من الاحتياط، الرجاء أيضًا تنظيف مصفاة المخلفات (راجع القسم "تنظيف مصفاة المخلفات" بصفحة ٣٤). وإلا قد ينخفض الأداء الخاص بوظيفة الفقاعات.**

تصريف الماء من الغسالة عند الطوارئ

١. قم بفصل الغسالة من مصدر الطاقة.
٢. افتح غطاء المصفاة بواسطة الضغط لأسفل وسحب المقبض الخاص به.

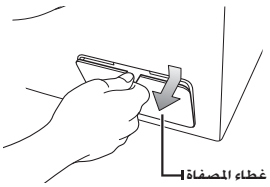

٣. افتح غطاء التصريف عند الطوارئ عن طريق سحبه.

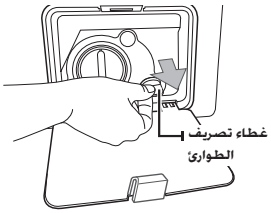

٤. أمسك الغطاء من نهاية أنبوب التصريف عند الطوارئ واجذبه ببطء مسافة حوالي ١٥ سم.
٥. اسمح بتدفق الماء بأكمله في وعاء.

قد تتبقى مياه بكمية أكثر مما تتوقع. قم بتحضير وعاء أكبر.

٦. قم بإعادة إدخال غطاء التصريف عند الطوارئ وأنبوبة التصريف.
٧. أعد غطاء المصفاة إلى مكانه.

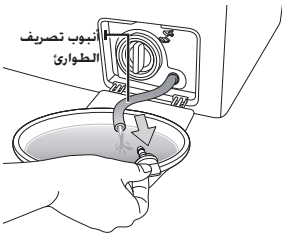

WF1802WPU2-03042Q_AR.indd Sec6:32 12/1/2011 9:32:53 PM

تنظيف درج مسحوق الغسيل والجزء الداخلي منه

١. اضغط على ذراع الإطلاق الموجود داخل درج مسحوق الغسيل واسحبه إلى الخارج.
٢. قم بإزالة الفاصل الخاص بالشطف ودرج المنظف السائل (خيار) من قاعدة المنظف.

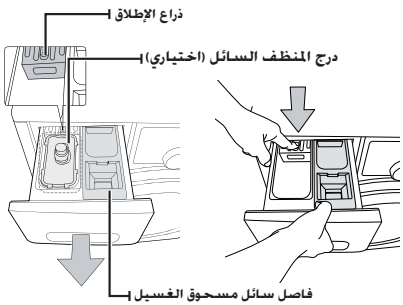

٣. اغسل كافة الأجزاء بالماء الجاري.

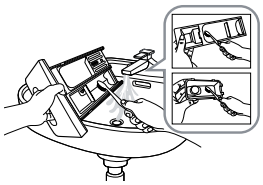

٤. نظف الجزء الداخلي للدرج باستخدام فرشاة أسنان قديمة.
٥. ضع الفاصل الخاص بالشطف ودرج المنظف السائل (خيار) في مكانه عن طريق دفعه بقوة في القاعدة.
٦. أعد الدرج إلى مكانه.
٧. قم بتشغيل دورة الشطف دون وجود أي غسيل في الحاوية لإزالة أي مسحوق متبق.

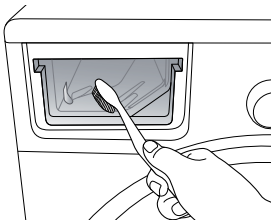

WF1802WPU2-03042Q_AR.indd Sec6:33 12/1/2011 9:32:54 PM

تنظيف الغسالة وصيانتها

تنظيف مصفاة المخلفات

نوصي بتنظيف مصفاة المخلفات ٥ أو ٦ مرات في العام أو عند عرض رسالة الخطأ "5E". (راجع قسم "تصريف الماء من الغسالة عند الطوارئ" في الصفحة السابقة.)

تنبيه: قبل البدء بتنظيف مصفاة المخلفات، تأكد من فصل سلك التيار الكهربي.

١. قم بإزالة المياه المتبقية أولاً (راجع "تصريف الماء من الغسالة عند الطوارئ" صفحة ٣٢.)

إذا قمت بفصل المصفاة دون تصريف المياه المتبقية، قد يتم رشح المياه المتبقية إلى الخارج.

٢. افتح غطاء المصفاة باستخدام مفتاح أو قطعة معدنية.
٣. أرخ غطاء التصريف عند الطوارئ بلفه إلى اليسار لصرف الماء من الغسالة.
٤. فك غطاء مصفاة المخلفات.

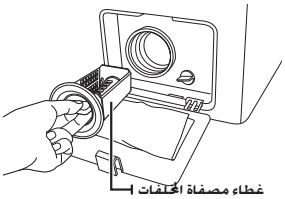

٥. اغسل أي أوساخ أو أي مواد أخرى عالقة في مصفاة المخلفات. تأكد من أن مروحة مضخة التصريف الموجودة خلف مصفاة المخلفات غير مسدودة.
٦. ضع غطاء مصفاة المخلفات في مكانه.
٧. ضع غطاء المصفاة في مكانه.

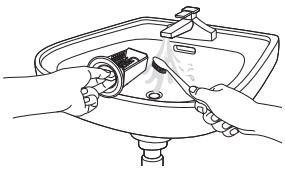

تنبيه: لا تفتح غطاء مصفاة المخلفات أثناء تشغيل الغسالة أو قد تتدفق المياه الساخنة للخارج.

- تأكد من استبدال غطاء المصفاة بعد تنظيف المصفاة. إذا كانت المصفاة بخارج الغسالة، قد يحدث خلل في وظائف تشغيل الغسالة أو تسرب للمياه.
- ينبغي تجميع المصفاة بالكامل بعد تنظيفها.

تنظيف الأسطح الخارجية

١. امسح الأسطح الخارجية للغسالة، بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير خادش.
٢. استخدم قطعة من القماش الناعم لتجفيف الأسطح الخارجية.
٣. لا تصب الماء على الغسالة.

WF1802WPU2-03042Q_AR.indd Sec6:34 12/1/2011 9:32:54 PM

تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

يجب عليك تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة كل عام على الأقل، أو عند ظهور رسالة خطأ "4E":

١. أغلق مصدر توريد الماء إلى الغسالة.
٢. فك الخرطوم من الجانب الخلفي للغسالة. قم بتغطية الخرطوم بقطعة من القماش، لمنع تدفق الماء بسبب الضغط العالي في الخرطوم.
٣. اسحب المصفاة الشبكية إلى الخارج من طرف الخرطوم بلطف باستخدام زرادية واشطفها بالماء حتى تصبح نظيفة. نظف أيضًا الجزأين الداخلي والخارجي للوصلة الملفوفة.
٤. أعد المصفاة إلى مكانها.
٥. ثبت الخرطوم بالغسالة مرة أخرى.
٦. تأكد أن الوصلات محكمة ولا تسرب الماء وقم بتشغيل الصنبور.

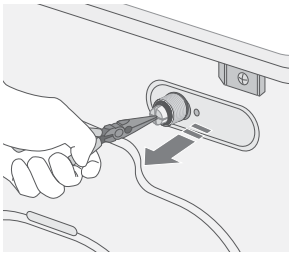

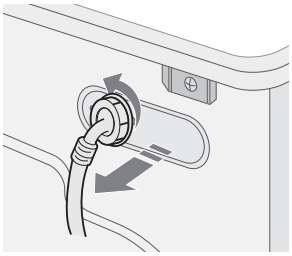

إصلاح غسالة متجمدة

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وتجمدت الغسالة:

١. افصل الغسالة من مصدر التيار الكهربي.
٢. صب الماء الدافئ على صنبور الماء لفك خرطوم توريد الماء.
٣. قم بإزالة خرطوم توريد الماء وانقعه في الماء الدافئ.
٤. صب الماء الدافئ في حاوية الغسالة واتركه لمدة ١٠ دقائق.
٥. أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يتم كما ينبغي.

تخزين الغسالة

إذا كنت بحاجة إلى تخزين الغسالة لمدة طويلة، فمن المستحسن تصريف الماء منها وفصلها. قد تتلف الغسالة في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين.

١. اختر دورة الغسيل السريع ثم قم بإضافة مادة تبييض في الحجيرة الخاصة بها. قم بتشغيل الغسالة من خلال الدورة دون وجود ملابس بها.
٢. أغلق صنابير الماء وافصل خراطيم توريد الماء.
٣. افصل الغسالة عن مأخذ التيار الكهربي، واترك باب الغسالة مفتوحًا للسماح بدخول الهواء داخل الحاوية.

في حالة قيامك بتخزين الغسالة في درجات حرارة تحت درجات التجمد، اترك فرصة لخروج الماء المتبقي في الغسالة قبل استخدامها.

WF1802WPU2-03042Q_AR.indd Sec6:35 12/1/2011 9:32:55 PM

استكشاف المشاكل وحلها ورموز المعلومات

تحقق مما يلي إذا كانت الغسالة...

المشكلة	الحل
الغسالة لا تعمل	• تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. • تأكد من إغلاق الباب بإحكام. • تأكد من فتح صنبور (صنابير) مصدر الماء. • تأكد من الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).
عدم وجود ماء أو عدم وجود ماء كافٍ	• افتح الصنبور تمامًا. • تأكد من أن خرطوم توريد الماء غير متجمد. • فك ثنيات خراطيم توريد الماء. • نظف المصفاة الموجودة على خرطوم توريد الماء.
يوجد مسحوق غسيل في الدرج بعد اكتمال دورة الغسل	• تأكد من تشغيل الغسالة بضغط ماء كافٍ. • تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق.
تهتز الغسالة أو تحدث صوتًا مرتفعًا	• تأكد من تركيب الغسالة على سطح مستو. إذا كانت الأرض غير مسطحة، اضبط أقدام الغسالة حتى تستقر على الأرضية. • تأكد من فك مسامير الشحن. • تأكد من عدم ملامسة الغسالة لأي شيء آخر. • تأكد من توزيع وزن الملابس الموجودة في الغسالة.
لا تقم الغسالة بتصريف الماء منها و/أو لا تقم بعملية العصر	• فك الثنيات الموجودة في خرطوم التصريف. وتجنب استخدام الخراطيم الملتوية. • تأكد من أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة.
الباب مغلق ولا يمكن فتحه.	• تأكد من تصريف الماء الذي في الحوض تمامًا. • تأكد من انطفاء ضوء قفل الباب. ينطفئ ضوء قفل الباب بعد التصريف.
صدور ضوضاء غريبة عن مضخة الصرف.	• تأكد من عدم انسداد مضخة الصرف بقطعٍ من النسيج أو الأتربة. ونظّف مصفاة المخلفات للتقليل من الضوضاء.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung المحلي.

WF1802WPU2-03042Q_AR.indd Sec7:36 12/1/2011 9:32:55 PM

رموز المعلومات

عندما تتعرض الغسالة للعطل، قد يظهر أحد رموز المعلومات على شاشة العرض. في حالة حدوث ذلك، الرجاء التحقق من هذا الجدول وتجربة الحلول المقترحة قبل الاتصال بخدمة العملاء.

رمز الكود	الحل
dE	• تأكد من إغلاق الباب بإحكام. • تأكد من عدم وجود ملابس عالقة بالباب.
4E	• تأكد أن صنبور توريد الماء مفتوح. • تحقق من ضغط الماء.
5E	• نظف مصفاة المخلفات. • تأكد من تركيب خرطوم تصريف الماء بطريقة صحيحة.
UE	• وزن الملابس غير موزّع. أعدة توزيع الملابس بالغسالة. في حالة غسيل قطعة واحدة من الملابس، مثل برنس حمام أو جينز، قد لا تكون نتيجة التجفيف النهائي مرضية، وتظهر رسالة خطأ "UE" في إطار العرض.
cE/3E	• اتصل بمركز خدمة ما بعد البيع.
قوغرلا	• تحدث تلك الظاهرة عندما تتكون الرغاوي بكثرة. وتحدث أيضًا عند إزالة الرغاوي. وبعد الانتهاء من إزالة الرغاوي، تستكمل الغسالة دورتها العادية (وتعد تلك العملية أمرًا طبيعيًا. وتظهر كعلامة للخطأ في حالة منع الأخطاء غير الملحوظة.)
Uc	• إذا كان الجهد الكهربي للمورّد الكهربي غير مستقر، سيتم إيقاف تشغيل الغسالة لحماية الأجزاء الكهربية. • إذا تم توفير الجهد الكهربي الملائم، ستستكمل الغسالة دورتها بشكلٍ تلقائي.

بالنسبة للرموز التي لم تذكر أعلاه، أو إذا لم يعمل الحل المقترح على حل المشكلة، اتصل بمركز خدمة Samsung أو الموزع المحلي المعتمد التابع لشركة Samsung.

WF1802WPU2-03042Q_AR.indd Sec7:37 12/1/2011 9:32:55 PM

معايرة الغسالة

وضع المعايرة

تقوم غسالة Samsung بحساب وزن الغسيل من تلقاء نفسها. ولضمان المزيد من الدقة في حساب الوزن، الرجاء تشغيل "وضع المعايرة" بعد لتركيب. يتم ضبط "وضع المعايرة" من خلال القيام بالخطوات التالية.

١. قم بإزالة الملابس أو أي محتويات أخرى من الغسالة وقم بإيقاف تشغيل الغسالة.
٢. اضغط الزر **Temp (درجة حرارة)** و الزر **Delay End (تأجيل التوقف)** في نفس الوقت، ثم اضغط على الزر **Power (الطاقة)**. ثم قم بتشغيل الغسالة.
٣. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)** لتنشيط "Calibration Mode (وضع المعايرة)".
٤. تدور حاوية الغسيل بنفس اتجاه عقارب الساعة، وتدور عكس عقارب الساعة لمدة ٣ دقائق تقريبًا.
٥. عند انتهاء "Calibration Mode (وضع المعايرة)"، تظهر الرسالة "End (En)" على لوحة العرض ويتم إيقاف تشغيل الغسالة تلقائيًا. وبذلك، تكون الغسالة جاهزة الآن للاستخدام.

WF1802WPU2-03042Q_AR.indd Sec7-1:38 12/1/2011 9:32:55 PM

جدول الدورات

جدول الدورات

(● خيار المستخدم)

البرنامج	أقصى وزن (كجم)		المسحوق			درجة الحرارة القصوى (درجة مئوية)	عدد الدورات في الدقيقة لسرعة التنشيف (القصوى)	
	WF1804 WF1802	WF1704 WF1702	Pre-wash (غسل أولي)	غسل	منقع الأقمشة		WF1804 WF1704	WF1802 WF1702
Cotton (قطن)	٨.٠	٧.٠	●	نعم	●	٩٥	١٤٠٠	١٢٠٠
Synthetics (ألياف صناعية)	٣.٠	٣.٠	●	نعم	●	٦٠	١٢٠٠	١٢٠٠
Denim (الجينز)	٣.٠	٣.٠	●	نعم	●	٦٠	٨٠٠	٨٠٠
Bedding (مفروشات)	٢.٠	٢.٠	●	نعم	●	٤٠	٨٠٠	٨٠٠
Dark Garment (ملابس داكنة)	٤.٠	٣.٠	●	نعم	●	٤٠	١٢٠٠	١٢٠٠
Daily Wash (غسل يومي)	٤.٠	٣.٠	●	نعم	●	٦٠	١٤٠٠	١٢٠٠
Eco Drum Clean (تنظيف الحاوية صديق البيئة)	-	-	-	نعم	-	٧٠	٤٠٠	٤٠٠
Super Eco Wash (غسل متميز صديق البيئة)	٤.٠	٣.٠	-	نعم	●	٤٠	١٢٠٠	١٢٠٠
Outdoor Care (العناية بملابس الخروج)	٢.٠	٢.٠	-	نعم	●	٤٠	١٢٠٠	١٢٠٠
Baby Care (العناية بملابس الأطفال)	٤.٠	٣.٠	●	نعم	●	٩٥	١٤٠٠	١٢٠٠
Wool (صوف)	٢.٠	٢.٠	-	نعم	●	٤٠	٨٠٠	٨٠٠
Hand Wash (الغسل اليدوي)	٢.٠	٢.٠	-	نعم	●	٤٠	٤٠٠	٤٠٠

البرنامج	Eco Bubble (الفقاعات صديقة البيئة)	Delay End (تأجيل التوقف)	Quick Wash (الغسل السريع)	Easy Iron (كي سهل)	Intensive (مكثف)	Soak (نقع)	مدة الدورة (بالدقائق)
Cotton (قطن)	●	●	●	●	●	●	١٣٠
Synthetics (ألياف صناعية)	●	●	-	●	●	●	٩١
Denim (الجينز)	●	●	-	●	●	●	٨٠
Bedding (مفروشات)	●	●	-	●	●	●	٩٩
Dark Garment (ملابس داكنة)	●	●	-	●	●	-	٧٩
Daily Wash (غسل يومي)	●	●	-	●	-	●	٥٥
Eco Drum Clean (تنظيف الحاوية صديق البيئة)	-	●	-	-	-	-	٨٦
Super Eco Wash (غسل متميز صديق البيئة)	●	●	-	●	●	-	٩٤
Outdoor Care (العناية بملابس الخروج)	●	●	-	-	-	-	٧٩
Baby Care (العناية بملابس الأطفال)	●	●	-	●	●	●	١٣٣
Wool (صوف)	●	●	-	-	-	-	٣٥
Hand Wash (الغسل اليدوي)	●	●	-	-	-	-	٣١

١. تستغرق دورة الغسل الأولي مدة أطول بحوالي ١٥ دقيقة.

٢. يتم قياس بيانات مدة الدورة تحت ظروف محددة وفقًا لمعايير IEC60456/EN60456 القياسية الرجاء تشغيل "وضع المعايرة" بد التركيب (راجع ص٣٨).

٣. تتوافق البرامج Cotton (قطن) عند درجة حرارة ٦٠/٤٠ مئوية + intensive (مكثف) + Eco bubble (الفقاعات صديقة البيئة) مع المعيار EN60456.

٤. قد تختلف مدة الدورة في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة الحرارة الخاصة بتوريد الماء وكمية الغسيل ونوعه.

٥. عند تحديد الوظيفة Intensive Wash (غسل مكثف)، تتم زيادة مدة الدورة لكل الدورات.

WF1802WPU2-03042Q_AR.indd Sec8:39 12/1/2011 9:32:55 PM

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل وتبييض وتجفيف وكي وتنظيف جاف إذا لزم الأمر.
يضمن استخدام هذه الرموز التناسق بين الشركات المصنّعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

	مواد مقاومة		يمكن الكي عند 100 درجة مئوية كحد أقصى
	الملابس الرقيقة		ممنوع الكي
	يمكن الغسيل عند 95 درجة مئوية		يمكن إجراء تنظيف جاف باستخدام أي مواد مذيبة
	يمكن الغسيل عند 60 درجة مئوية		التنظيف الجاف بالبروكلوريد أو الوقود المخفف أو الكحول النقي أو R113 فقط
	يمكن الغسيل عند 40 درجة مئوية		التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R113 فقط
	يمكن الغسيل عند 30 درجة مئوية		ممنوع استخدام التنظيف الجاف
	يمكن غسلها باليد		تجفف وهي مفرودة
	تنظيف جاف فقط		يمكن تعليقها لتجف
	يمكن استخدام مادة تبييض مع الماء البارد		تجفيف الملابس وهي معلقة على حمالة
	يحظر استخدام مادة تبييض		تجفيف بالتدوير. حرارة عادية
	يمكن الكي عند 200 درجة مئوية كحد أقصى		تجفيف بالتدوير. حرارة خفيفة
	يمكن الكي عند 150 درجة مئوية كحد أقصى		يحظر تجفيفها بالتدوير

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بخلع الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تتجاوز في الكميات الموصى بها لمسحوق الغسيل وفق إرشادات الشركات المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفر الماء والكهرباء من خلال إجراء الغسل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

بيان التوافق

يتوافق هذا الجهاز مع معايير السلامة الأوروبية (EN Standard 60335و EC directive 93/68).

WF1802WPU2-03042Q_AR.indd Sec9:40 12/1/2011 9:32:55 PM

المواصفات

النوع		غسالة أمامية التحميل	
الأبعاد		WF1804 / WF1802	
		العرض ٦٠٠ مم × العمق ٦٠٠ مم × الارتفاع ٨٥٠ مم	
ضغط الماء		٥٠ كيلو باسكال إلى ٨٠٠ كيلو باسكال	
كمية الماء		٥٦ لترًا	
الوزن الصافي		WF1804	WF1802
		٧٠ كجم	١٩ كجم
سعة الغسل والتنشيف		٨ كجم	
استهلاك الطاقة	الغسل	٢٢٠ فولت	١٥٠ واط
		٢٤٠ فولت	١٥٠ واط
	الغسل والتسخين	٢٢٠ فولت	٢٠٠٠ واط
		٢٤٠ فولت	٢٤٠٠ واط
	التنشيف	الطراز	WF1804 / WF1802
		٢٣٠ فولت	٦٠٠ واط / ٥٥٠ واط
	الضخ		٣٤ واط
وزن العبوة	الغلاف الورقي		٢ كجم
	الغلاف البلاستيكي		٠.٥ كجم
دورات التنشيف	الطراز	WF1804	WF1802
	دورة في الدقيقة	١٤٠٠	١٢٠٠

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.

WF1802WPU2-03042Q_AR.indd Sec9:41 12/1/2011 9:32:57 PM

الملحق

المواصفات

النوع			غسالة أمامية التحميل	
الأبعاد			WF1704 / WF1702	
			العرض ٦٠٠ م x العمق ٦٠٠ م x الارتفاع ٨٥٠ م	
ضغط الماء			٥٠ كيلو باسكال إلى ٨٠٠ كيلو باسكال	
كمية الماء			٤٩ لترًا	
الوزن الصافي			WF1704	WF1702
			١٩ كجم	١٨ كجم
سعة الغسل والتنشيف			٧ كجم	
استهلاك الطاقة	الغسل	٢٢٠ فولت	١٥٠ واط	
		٢٤٠ فولت	١٥٠ واط	
	الغسل والتسخين	٢٢٠ فولت	٢٠٠٠ واط	
		٢٤٠ فولت	٢٤٠٠ واط	
	التنشيف	الطراز	WF1704	WF1702
		٢٣٠ فولت	١٦٠٠ واط	٥٥٠ واط
	الضخ		٣٤ واط	
وزن العبوة	الغلاف الورقي		٢ كجم	
	الغلاف البلاستيكي		٠.٥ كجم	
دورات التنشيف	الطراز		WF1704	WF1702
	دورة في الدقيقة		١٤٠٠	١٢٠٠

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.

WF1802WPU2-03042Q_AR.indd Sec9:42 12/1/2011 9:32:57 PM

مذكـرة

WF1802WPU2-03042Q_AR.indd Sec9:43 12/1/2011 9:32:57 PM

هل لديك أي أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت
Egypt	08000-726786	www.samsung.com

رقم الكود: DC68-03042Q_EN

WF1802WPU2-03042Q_AR.indd Sec9:44 12/1/2011 9:32:57 PM